INSTRUCTION MANUAL

MODEL 150B

MICROVOLT AMMETER

KEITHLEY INSTRUMENTS

WARRANTY

We warrant each of our products to be free from defects in material and workmanship. Our obligation under this warranty is to repair or replace any instrument or part thereof which, within a year after shipment, proves defective upon examination. We will pay domestic surface freight costs.

To exercise this warranty, call your local field representative or the Cleveland factory, DDD 216-248-0400. You will be given assistance and shipping instructions.

REPAIRS AND RECALIBRATION

Keithley Instruments maintains a complete repair service and standards laboratory in Cleveland, and has an authorized field repair facility in Los Angeles and in all countries outside the United States having Keithley field representatives.

To insure prompt repair or recalibration service, please contact your local field representative or the plant directly before returning the instrument.

Estimates for repairs, normal recalibrations, and calibrations traceable to the National Bureau of Standards are available upon request.

TABLE OF CONTENTS

Section		Page
MODEL 150B SPECIFICATIONS . . .		ii
1.	GENERAL DESCRIPTION	1
1-1.	General	1
1-2.	As a Microvoltmeter . .	1
1-3.	As a Null Detector. . .	1
1-4.	As an Ammeter	1
2.	OPERATION	1
2-1.	Mode of Operation . . .	1
2-2.	Battery Operation . . .	2
2-3.	Microvolt & Null Detector Operating Procedures	3
2-4.	Ammeter Operating Procedures	4
2-5.	Zero Suppress Operation	4
2-6.	Filter Switch	5
2-7.	Recorder Outputs. . . .	5
2-8.	Synchronizing Terminals	5
2-9.	Differential (Floating) Measurements.	5
2-10.	Accuracy Considerations	6
2-11.	Thermal Noise	6
2-12.	Input Resistance. . . .	6
2-13.	Thermal Emfs.	7
2-14.	Shielding	7
2-15.	Operating From Souce Other than 117V, 60 Hz.	7
2-16.	Accessories for Input Connections	8
3.	CIRCUIT DESCRIPTION	9
3-1.	General	9
3-2.	Input Circuit	9
3-3.	AC Amplifier.	10
3-4.	Demodulator	10
3-5.	DC Amplifier.	10
3-6.	Zero Suppression. . . .	10
3-7.	Power Supplies.	11
3-8.	Battery Charging Circuit	11
4.	SERVICING	13
4-1.	General	13
4-2.	Servicing Schedule. . .	13
4-3.	Parts Replacement . . .	13
4-4.	Mechanical Chopper Replacement	13
4-5.	Troubleshooting	13
4-6.	Preliminary Troubleshooting Procedures . .	13
4-7.	Power Supply Checkout .	14
4-8.	Amplifier Checkout. . .	15
5.	CALIBRATION	18
5-1.	General	18
5-2.	Accuracy Check.	18
5-3.	Meter Calibration . . .	18
5-4.	Meter Noise Check . . .	18
5-5.	Current Compensation Calibration	19
5-6.	TT Adjust Calibration .	19
5-7.	Filter Adjust Calibration.	19
5-8.	Drift Verification. . .	19
6.	ACCESSORIES	26
6-1.	Model 4006 Rack Mounting Kit	26
6-2.	Model 4007 Dual Rack Mounting Kit.	26
6-3.	Model 370 Recorder. . .	26
6-4.	Model 399 Isolating Amplifier	27
7.	REPLACEABLE PARTS	28
7-1.	Replaceable Parts List.	28
7-2.	How to Order Parts. . .	28
	Model 150B Replaceable Parts List.	29
	Capacitors.	29
	Diodes.	29
	Miscellaneous Parts .	30
	Resistors	31
	Transistors	34
	Models 1483, 1484 Replaceable Parts List. .	35
	Schematic Diagram 20357D	36
	Schematic Diagram 20986E	37
	Repair and Calibration Form.	39
*	Change Notice	Last Page

* Yellow Change Notice Sheet is included only for instrument modifications affecting the Instruction Manual.

TABLE OF ILLUSTRATIONS AND TABLES

ILLUSTRATIONS

No.	Subject	Page
1.	Front Panel Controls . . .	3
2.	Rear Panel Controls. . . .	3
3.	Model 1506 Low-Thermal Input Cable.	8
4.	Model 1483 Low-Thermal Connection Kit	8
5.	Amplifier Circuits Block Diagram.	9
6.	Input Circuit Diagram. . .	10
7.	Power Supplies Block Diagram.	11
8.	-5V Regulated Supply Wave Form	14
9.	Chopper Drive Wave Form. .	14
10.	Chassis Top View	20
11.	Chassis Bottom View. . . .	21
12.	Component Locations,PC-121	22
13.	Resistor Locations,PC-121.	22
14.	Component Locations,PC-155	23
15.	Resistor Locations,PC-155.	23
16.	Component Locations,PC-120	24
17.	Resistor Locations,PC-120.	24
18.	Component Locations,PC-154	25
19.	Model 4006 Rack Mounting Kit.	26
20.	Model 4007 Dual Rack Mounting Kit.	27

TABLES

No.	Subject	Page
1.	Specifications	ii
2.	Front Panel Controls . . .	2
3.	Rear Panel Controls. . . .	2
4.	Input Resistance, Maximum Source Resistance & Line Frequency Rejection by Range.	4
5.	Suppression Voltage by Control Settings	5
6.	Servicing Equipment. . . .	12
7.	Pre-assembled Components .	13
8.	Power Supply Troubleshooting	15
9.	Signal Level, Maximum Ripple and Resistance for Regulated Power Supplies .	15
10.	Range Checkout Table . . .	16
11.	Amplifier Troubleshooting.	16
12.	150B Internal Controls . .	18
13.	Model 4006 Parts List. . .	26
14.	Model 4007 Parts List. . .	27
15.	Abbreviations and Symbols.	28
16.	Code List of Suggested Manufacturers.	35

TABLE 1. Keithley Model 150B Specifications.

AS A VOLTMETER AND NULL DETECTOR:

RANGE: 0.3 microvolt (3 x 10^{-7} volt) full scale to 1 volt on a zero-center meter. 14 overlapping ranges in 1x and 3x steps.

ACCURACY:

Meter: ±2% of full scale on all ranges.

1-Volt Output Terminals: ±1%.

100-Millivolt Output Terminals: Adjustable to ±1%.

Note: Accuracy specifications exclude noise and drift.

ZERO DRIFT: Less than 0.1 microvolt per 24 hours after 1-hour warm-up with reasonably constant ambient temperature. Long-term drift is non-cumulative.

INPUT NOISE: With input shorted, less than 5 nanovolts rms (25 nanovolts peak-to-peak) on the most sensitive range. With 10,000-ohm source resistance, less than 14 nanovolts rms (70 nanovolts peak-to-peak) on the most sensitive range.

INPUT RESISTANCE:

Range	Input Resistance Greater than, ohms	Maximum Source[1] Resistance, ohms
0.3 μv	1 M	10 k
1 μv	3 M	30 k
3 μv	10 M	100 k
10 μv	30 M	300 k
30 μv and above	100 M	1 M

Note: [1]Source resistances higher than the recommended maximum will increase noise and rise time.

ZERO SHIFT WITH SOURCE RESISTANCE: Less than 10^{-10} volt per ohm.

LINE FREQUENCY REJECTION*: A voltage of power line frequency which is 75 db (p-p/dc) greater than full scale affects reading less than 2% on the most sensitive range (decreasing to 60 db on the 10-microvolt range and to 20 db on the 1-volt range).

COMMON MODE REJECTION*: Greater than 180 db at line frequency or dc.

RISE TIME (10% to 90%)*: Using up to 1000 ohms source resistance, less than 0.5 second on the 30-microvolt and higher ranges, increasing to 3 seconds on the 0.3-microvolt range. Using maximum source resistance up to 100 kilohms, rise times increase to approximately 3 seconds on the 30-microvolt and higher ranges, 6 seconds on the 10-microvolt and lower ranges.

ZERO SUPPRESSION: Up to 10 millivolts available. Stability is such that 100 times full scale may be suppressed.

AS AN AMMETER:

RANGE: 3 x 10^{-10} ampere full scale to 10^{-3} ampere on zero-center meter. 14 overlapping ranges in 1x and 3x steps.

*Note: All specifications are measured with filter in. With filter out, rise times for any source resistance up to maximum are less than 0.5 second on the 30-microvolt and higher ranges, increasing to 3 seconds on the 0.3-microvolt range. With filter out, the rejection ratios are reduced about 30 db.

ACCURACY:

Meter: ±3% of full scale on all ranges.

1-Volt Output Terminals: ±2%.

100-Millivolt Output Terminals: Adjustable to ±2%.

Note: Accuracy specifications exclude noise and drift.

ZERO DRIFT: ±2 x 10^{-11} ampere per 24 hours after 1-hour warm-up.

INPUT NOISE: Less than 3 x 10^{-12} ampere peak-to-peak on the most sensitive range.

INPUT VOLTAGE DROP: 100 microvolts on nanoampere ranges, 1 millivolt on microampere ranges.

INPUT RESISTANCE: On the microampere ranges, the input resistance is equal to 10^{-3} divided by the range in amperes. On the nanoampere ranges, it is equal to 10^{-4} divided by the range in amperes.

GENERAL:

ISOLATION: Circuit ground to chassis ground: Greater than 10^{9} ohms shunted by 0.001 microfarad. Circuit ground may be floated up to ±400 volts with respect to chassis ground. On battery operation, may be completely isolated from power line and ground.

RECORDER OUTPUT (1 volt):

Output: ±1 volt at up to 1 milliampere for full-scale meter deflection on any range.

Resistance: Less than 5 ohms within the amplifier pass band.

Noise: Input noise times gain plus modulation products.

Modulation Products: Less than 4% peak-to-peak of full scale with input shorted.

RECORDER OUTPUT (100 millivolts):

Output: ±100 millivolts adjustable over a 10% span for full-scale meter deflection on any range.

Resistance: Less than 1000 ohms.

Noise: Input noise times gain plus modulation products.

Modulation Products: Less than ½% peak-to-peak of full scale with input shorted.

Using this output, rise time is at least one second on any range.

CONNECTORS: Input: Special Keithley Model 1485. Output: Amphenol 80PC2F.

POWER:

Line Operation: 105-125 or 210-250 volts (switch selected), 60 cps, 25 watts. 50-cps models available.

Battery Operation: Rechargeable nickel-cadmium 6-volt battery pack. Over 9 hours continuous operation from full charge; recharges in less than 16 hours from built-in charging circuit.

DIMENSIONS, WEIGHT: 7″ high x 8¾″ wide x 10″ deep; net weight, 16 pounds.

ACCESSORIES SUPPLIED: Model 1506 Low-Thermal Input Cable: 4′ low-thermal triaxial cable, alligator clips. Mating output connector. Length of low-thermal solder. Internally mounted nickel-cadmium battery pack, Model 1489.

SECTION 1. GENERAL DESCRIPTION

1-1. GENERAL. The Keithley Model 150B Microvolt Ammeter is a completely solid-state, extremely sensitive instrument which measures voltages from 0.3 microvolt full scale to 1 volt and currents from 0.3 nanoampere full scale to 1 milliampere. It can be used as a voltmeter, null detector or an ammeter with either battery or line power operation.

1-2. AS A MICROVOLTMETER.

a. The Model 150 is ideal as a microvoltmeter for measuring semiconductor resistivity, thermopile and thermocouple potentials, Hall effect, contact resistances, biologically generated emfs, electrochemical potentials and strain gauges emfs.

b. The Model 150B has input noise less than 25 nanovolts peak-to-peak; high input resistance and low zero shift; excellent zero stability; very high line-frequency rejection and common mode rejection; battery operation; zero suppression; special low-thermal input circuitry; two available outputs.

c. With these features, the Model 150B permits excellent resolution; maintains measurement accuracy even from high resistance sources; is ideal for long-term measurements; detects dc signals in the presence of large ac voltages and is virtually insensitive to ac or dc voltages applied between circuit and chassis ground; disconnects from power lines for improved isolation; measures small changes in dc signals; reduces temperature and shielding problems; provides outputs where either filtering is needed or fast response or greater output power is needed.

1-3. AS A NULL DETECTOR. As a null detector, the Model 150B is excellent for use in ratio measurements and in potentiometer and bridge circuits.

a. The Microvolt Ammeter's outstanding features as a null detector are: very good resolution; high line frequency and common mode rejection; isolation from chassis ground to input terminals; battery operation; high input resistance; floating capability; low zero shift; zero suppression.

b. Because of these features, the Model 150B has resolution comparable to the maximum usable resolution of most potentiometers and bridges; may be simply connected to the terminals of a null circuit; is very insensitive to common mode voltages developed in the null circuit; can be used in most potentiometer and bridge circuits without off-null loading; accurately detects a null regardless of the setting on most potentiometers and bridges; compensates for thermal emfs generated in the null circuit.

1-4. AS AN AMMETER.

a. The Model 150B has general use in research, design and production test facilities. It is useful for making low voltage drop, in-circuit measurements as well as measuring the output of radiation detectors, phototubes and other current generating transducers.

b. The instrument has low voltage drop for measuring currents in very low-voltage circuits; low zero drift for measuring long-term current; excellent floating capabilities for measuring ungrounded sources; and low input noise, giving excellent resolution.

SECTION 2. OPERATION

2-1. MODE OF OPERATION.

a. When the POWER SUPPLY Switch is in the OFF position, the Model 150B will not operate, and the red dot cannot be seen through the switch knob.

b. The Model 150B operates either from an ac power line when the POWER SUPPLY Switch is in the AC position, or from its battery with the Switch in BATTERY position. In either position, the red dot can be seen. For most uses the instrument functions well from ac.

Use battery operation, however, if the ac power line will create ground loop or isolation problems. Isolation from low to ground is complete for battery operation when the power cord is disconnected; it is greater than 10^9 ohms shunted by .001 microfarad with the power cord connected. Also, battery operation is useful to reduce modulation products (usually 8 Hz) which may appear at the output for certain low-level measurements. (See paragraph 2-14).

NOTE

Before using the battery operation, thoroughly read paragraph 2-2. Improper battery operation can damage the battery pack and lead to inaccurate measurements.

2-2. BATTERY OPERATION.

a. The Model 150B is supplied with a rechargeable

TABLE 2.

Model 150B Front Panel Controls. The Table briefly describes each control, and indicates the paragraph which contains instructions on the use of the control.

Control	Functional Description	Paragraph
POWER SUPPLY Switch	Controls mode of operation for power supply	2-1,2-2
RANGE Switch	Selects the full scale voltage or current which is to be measured	2-3,2-4
FUNCTION Switch	Determines whether the Model 150B measures voltage or current; selects input resistance on voltage ranges	2-3,2-4
ZERO SUPPRESS Controls	Determines the amount of zero suppression	2-5
FILTER Switch	Connects or disconnects a line frequency filter at the input	2-6
INPUT Receptacle	Connection for input cable	2-16

TABLE 3.

Model 150B Rear Panel Controls. The Table briefly describes each control, and indicates the paragraph which contains instructions on the use of the control.

Control	Functional Description	Paragraph
LINE VOLTAGE Switch	Sets Model 150B for 117 or 234-volt ac power line	2-15
BATTERY FUSE	Quick-Acting, 3/4 amp 3AG or MDL fuse	---
Line Fuse	117-volt: Slow-Blow 1/4 amp 3AG or MDL fuse 234-volt: Slow-Blow 1/8 amp 3AG or MDL fuse	---
Power Cord	Provides ground connection for cabinet; 3-wire power cord with NEMA approved 3-pronged plug	---
1V OUTPUT Receptacle	Power output; provides ±1 volt at up to one milliampere for a full-scale meter deflection. Fast response.	2-7
100MV OUTPUT Receptacle	Recorder output; provides 100mV, adjustable within 10mV span, for full-scale meter deflection. Filtered.	2-7
100MV ADJUST	Adjusts 100MV OUTPUT within 10mV span	2-7
GND Terminal	Connection to chassis ground	2-3,2-9,2-14
LO Terminal	Connection to circuit low; circuit low will not be at chassis ground unless LO is linked to GND	2-3,2-9,2-14
SYNCHRONIZING Jacks	Eliminates any interaction between two adjacent Model 150B's	2-8

6-volt, 4 ampere-hour nickel-cadmium battery pack. Do not use the battery more than nine consecutive hours without recharging.

NOTE

Permanent damage to the battery pack may occur if it is used for more than 10 consecutive hours without recharging. At this discharge rate, the number of recharge cycles is greatly reduced. Before using the Model 150B, check the state of the battery charge.

b. Check the battery charge before making a measurement. Hold the POWER SUPPLY Switch in the BATT. TEST position; the red dot will show. In this position the Model 150B shows the state of the battery charge directly on the meter. The minimum acceptable charge is a meter indication of approximately +6 on the upper meter scale.

NOTE

When the battery is used beyond its capacity, two effects are seen. There is a large shift in zero offset from ac to battery operation. Also, the power supplies do not regulate and high ripple voltages appear at the supply outlets.

1. The terminal voltage of a nickel-cadmium battery changes very little from full charge to almost complete discharge. The +6 meter indication for minimum charged terminal voltage will vary a few minor divisions for different batteries. After a few charge-discharge cycles, the exact value of the charged terminal voltage for any individual battery will be apparent.

2. Recharge the battery if needed. Otherwise, battery operation is the same as for the ac power line operating mode; refer to paragraph 2-3.

c. To recharge the battery, connect the power cord to an ac power line. Turn the POWER SUPPLY Switch to AC or OFF. The battery will be automatically charged in either of these positions. For every one hour that the battery is used, two hours are required to recharge it. The charging circuit is such that the battery cannot be overcharged.

d. It is suggested that the battery be used during the day and be recharged at night. Leave the instrument always connected to the ac power line; then turn the POWER SUPPLY Switch to OFF at night. After a fully charged battery is used for nine consecutive hours, it will recharge within 18 hours. Leaving the power cord connected has little effect on the isolation: 10^9 ohms with the low-ground link disconnected. If the battery is used longer than 10 hours, it may take considerably longer than 18 hours to recharge.

2-3. MICROVOLT AND NULL DETECTOR OPERATING PROCEDURES.

a. Set the front panel controls as follows:

POWER SUPPLY Switch	OFF
RANGE Switch	1000MV
FUNCTION Switch	INPUT R 100K
ZERO SUPPRESS COARSE Control	OFF
FILTER Switch	IN

NOTE

Make sure the ZERO SUPPRESS Control is OFF. If it is not, a suppression voltage is introduced, which may cause an error in measurements. See paragraph 2-5 for zero suppression.

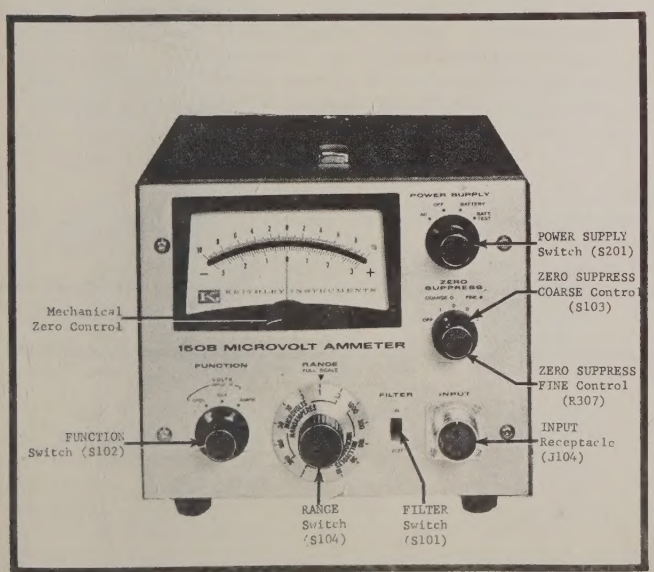

FIGURE 1. Model 150B Front Panel Controls. Circuit designations refer to Replaceable Parts List and schematic diagram.

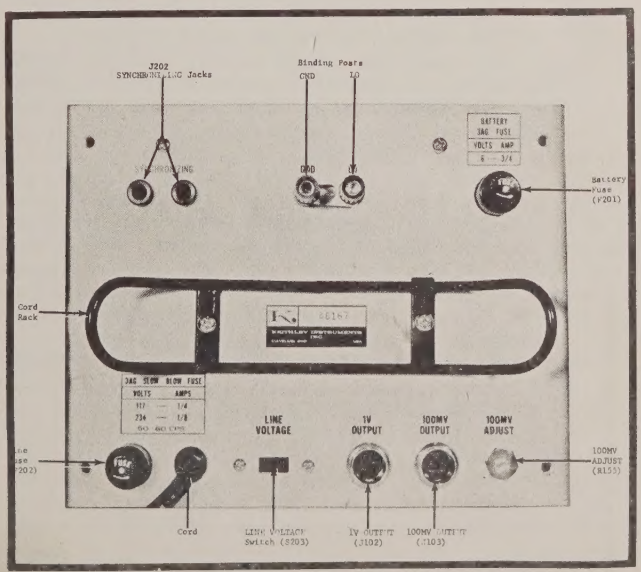

FIGURE 2. Model 150B Rear Panel Controls. Circuit designations refer to Replaceable Parts List and schematic diagram.

b. Check the voltage shown on the rear panel LINE VOLTAGE Switch; connect the Model 150B to the ac power line. The battery will now be charging.

c. If the circuit low is to be at ground, put the low-ground link between the LO and GND terminals on the rear panel. The ground terminal (GND) is connected to the chassis and the third wire of the power cord. The low terminal (LO) is connected to circuit ground and the low side of the INPUT Connector.

d. Turn the POWER SUPPLY Switch to the desired mode of operation, AC or BATTERY. For most stable operation, allow the Model 150B to warm up for 1 hour.

e. Connect the unknown voltage to the INPUT Receptacle using a Model 1506 or 1507 Low-Thermal Input Cable. (See paragraph 2-16).

f. Set the FUNCTION Switch to INPUT R OPEN if high input resistance is desired. In this position the Model 150B input resistance varies by range (see Table 4). If the input is left completely open circuit, the meter may drift off scale on any range within a few seconds. Set the FUNCTION Switch to INPUT R 100K if it is desired to maintain on-scale readings as the input circuit is opened. In this position the Microvolt Ammeter measures voltage with 100 kilohms shunting the INPUT Terminals.

g. Increase the sensitivity of the Model 150B with the RANGE Switch until the meter shows the greatest on-scale deflection.

1. Check the source resistance to make sure that it is within the maximum value specified for the range being used. (See Table 4). If the maximum is exceeded, the Model 150B may not perform within its specifications.

2. Zero offsets with the ZERO SUPPRESS Controls off will vary with the quality of the circuit's thermal construction. When a Model 1488 Low-Thermal Shorting Plug is connected to the Model 150B INPUT Receptacle, offset should be less than 0.5 microvolt.

3. Shifts in source resistance may also affect the zero offset, if the source resistance approaches the maximum value given in Table 4. This effect is negligible for source resistances less than 10% of the maximum value.

h. At low levels, spurious emfs may be generated simply by contact between the input leads and the circuit under test. These may be compensated for by the zero suppression circuit. If possible, always leave the instrument connected, and adjust the zero after establishing a zero reference in the apparatus under test. For example, in bridge measurements, disconnect the bridge exciting voltage, or with a phototube, shield the tube from light.

2-4. AMMETER OPERATING PROCEDURES. Set the FUNCTION Switch to the AMPS position. Select the range using the RANGE Switch. Make sure low resistance leads are used to connect the source to the Model 150B input to minimize input voltage drop. The maximum allowable current overload on any range is 100 milliamperes. If this is exceeded, or if the maximum input voltage drop is exceeded (see specifications), the current-sensing resistor may be damaged. The Model 150B rise time (10% to 90%) as an ammeter is less than 1 second on the 3-nanoampere and higher ranges, increasing to 3 seconds on the 0.3-nanoampere range.

2-5. ZERO SUPPRESS OPERATION.

a. Purpose: The zero suppression circuit cancels any constant voltage in order to use a more sensitive range to observe a superimposed signal. Stability is such that up to 100 times full scale may be suppressed. For example, the Model 150B can measure changes of less than one microvolt in a 100-microvolt steady signal on its 1-microvolt range.

b. Suppression Voltages Available: The COARSE Control sets the suppression voltage to one of four maximum values. (Refer to Table 5). The FINE Control continuously adjusts the voltage between the positive and negative value of COARSE Control setting. For example, if the COARSE Control is at 3 for a maximum

TABLE 4.

Model 150B Input Resistance, Maximum Source Resistance, and Minimum Line frequency Rejection by Range. The rejection is the ratio of impressed peak-to-peak line frequency (50 or 60 Hz) voltage at input to the indicated dc voltage. The line frequency rejections below are reduced about 30 dB on all ranges with the filter out.

Range	Input Resistance Greater Than	Maximum Source Resistance	Minimum Line Frequency Rejection
0.3 microvolt	1 MΩ	10 kΩ	5500:1
1 microvolt	3 MΩ	30 kΩ	---
3 microvolts	10 MΩ	100 kΩ	---
10 microvolts	30 MΩ	300 kΩ	1000:1
30 microvolts	100 MΩ	1 MΩ	---
100 microvolts	100 MΩ	1 MΩ	---
300 microvolts	100 MΩ	1 MΩ	---
1 millivolt through 1 volt	100 MΩ	1 MΩ	30:1

suppression voltage of ±1.2 mV, the FINE Control adjustment span is from -1.2 mV to +1.2 mV.

TABLE 5.
Suppression Voltage by Control Settings. The zero suppression voltage shown is the maximum value, ±15%, for each COARSE Control setting. The level of suppression voltage for each setting is the same on every voltage range.

ZERO SUPPRESS COARSE Control Setting	Maximum Suppression Voltage
1	±3.6 microvolts
2	±120 microvolts
3	±1.2 millivolts
4	±12 millivolts

c. Operation:

1. Keep the COARSE Control in OFF position. Adjust the RANGE Switch to the range that gives the closest to a full scale meter deflection.

2. Completely turn the FINE Control in the direction opposite to the meter deflection (counterclockwise for positive deflections and clockwise for negative deflections).

3. Increase the COARSE Control setting until the meter needle passes through zero. Adjust the FINE Control for zero deflection.

4. Set the RANGE Switch to a more sensitive range, up to 100 times more sensitive than the original range (four RANGE Switch positions). Readjust the FINE Control to zero, if necessary.

2-6. FILTER SWITCH.

a. The input filter is adjusted at the factory for 60 Hz line frequency, unless 50 Hz is indicated on the rear panel of the Model 150B.

b. When the FILTER Switch is at the IN position, a line frequency (Twin-Tee) filter is used at the INPUT. With the Switch at the IN position, a higher level (about 30 dB) of 60 Hz can be tolerated at the INPUT without affecting the accuracy or the sensitivity of the Model 150B. Normally, it is best to leave the FILTER Switch at the IN position for all cases except where the source resistance exceeds 300 kilohms.

c. The filter has a 5-microfarad capacitor. When the FILTER Switch is set to IN, this capacitor is in use and produces an RC time constant. For a source resistance of 300 kilohms or greater, the rise time of the Model 150B is affected by the RC time constant and increases above that given in the specifications.

d. With the Switch set to OUT, the capacitor is not in use. If rise time is important, set the FILTER Switch to the OUT position for source resistances greater than 300 kilohms. However, with the filter out, the line frequency rejection is reduced 30 dB on all ranges.

2-7. RECORDER OUTPUTS. The Model 150B has two recorder outputs; ±1 volt at up to 1 milliampere and a filtered ±100 millivolts.

a. The ±1 volt, 1 milliampere output is accurate to ±1% of full scale. Output resistance is less than 5 ohms within the amplifier pass band. This output may be used during either battery or ac operation. If the Model 150B is used for differential measurements, do not ground the recorder connected to the output.

1. When recording with the 1 volt 1 milliampere output, the Keithley Model 370 Recorder offers complete compatability with the Model 150B. This output is sufficient to drive the Model 370 without the use of any recorder preamplifiers. The Model 370 allows maximum capability of the Model 150B. It has 1% linearity, 10 chart speeds, and can float up to ±500 volts off ground. Using the Model 370 with the Model 150B avoids interface problems which may be encountered between a measuring instrument and a recorder.

2. The Model 370 is very easy to use with the Model 150B. All that is necessary is connecting the two units and adjusting an easily accessible control for full-scale recorder deflection. The furnished Model 3701 Input Cable mates with the output connector on the Model 150B. On the most sensitive ranges of the Model 150B, under some conditions, an 8 Hz beat may appear. This condition can be eliminated by mounting a 100-microfarad capacitor across pins 14 and 17 in the back of the Model 370 Recorder

b. The other recorder output is ±100 millivolts. This output can be used in conjunction with servo balance recorders. The 100MV ADJUST, which is a screwdriver adjust potentiometer on the rear panel of the Model 150B, is used to adjust the 100MV output over a 10-millivolt span. The resistance of this recorder output is less than 1000 ohms. The 100MV Output Receptacle is filtered to provide less than 1/2% peak-to-peak ac voltages in the output signal. The rise time will be no less than 1 second on any range. This output may be used during either ac or battery operation. If the Model 150B is used for differential measurements, do not ground the recorder connected to the output.

2-8. SYNCHRONIZING TERMINALS. All Model 150Bs have nearly the same chopper frequency. When two or more Model 150Bs are close together, a beat may develop between the instruments due to the slight difference in their chopper frequencies. To eliminate this interaction, use the two synchronizing terminals on the rear panel of the instrument. These terminals synchronize the chopper frequencies. No polarity is necessary; just connect leads from the terminals of one Model 150B to the same terminals on an adjacent Model 150B.

2-9. DIFFERENTIAL (FLOATING) MEASUREMENTS.

a. The Model 150B will measure the difference be-

tween two voltages, neither of which is at power line ground. It can be floated up to ±400 volts off ground.

CAUTION

The instantaneous voltage between circuit low and case ground must not exceed ±400 volts at any time. The front panel controls are electrically connected to the case. If the power cord is unplugged, and the off-ground voltage exceeds ±400 volts, the case may be at any voltage. Use necessary safety precautions.

b. For best results in making differential measurements, follow the steps below:

1. Remove the link from the LO terminal on the rear panel.

2. Connect the source to the input. Make measurements as described in paragraph 2-3. The zero suppress controls may be used for differential measurements.

3. If power line frequency pickup is a problem, use battery operation.

4. When recording from the Model 150B with the LO to GND link removed, be sure to use a recorder which also has LO isolated from GND by a high impedance, and is also capable of withstanding the necessary voltage with respect to ground. The Keithley Model 370 Recorder meets these requirements.

5. Use of the Keithley Model 399 Isolating Amplifier with the Model 150B makes off-ground measurement much more convenient. With this instrument, the Model 150B may be floated at its maximum off-ground potential while being connected through the Model 399 to a grounded recorder. Refer to Section 6 for more information on the Model 399.

2-10. ACCURACY CONSIDERATIONS. For sensitive measurements — 10 millivolts and below — other considerations besides the instrument affect accuracy. Effects not noticeable when working with higher voltages are very important with microvolt signals. The Model 150B reads only the signal received at its input; therefore, it is important that this signal be properly transmitted from the source. The following paragraphs indicate factors which affect accuracy: thermal noise, input resistance, thermal emfs, shielding and circuit connections.

2-11. THERMAL NOISE.

a. The lower limit in measuring small potentials occurs when the Johnson noise, or thermal agitation, becomes evident. The amount of noise present in the source is shown in the following equations.

1. Thermal noise in any ideal resistance can be determined from the Johnson noise equation:

$$E^2_{rms} = 4\ k\ T\ R\ F \qquad \text{Equation 1.}$$

where E_{rms} is the rms noise voltage developed across the voltage source;
T is the temperature in degrees Kelvin;
R is the source resistance in ohms;
F is the amplifier bandwidth in Hz;
k is the Boltzmann constant (1.38×10^{-23} joules/°K).

For an ideal resistance at room temperature (300°K), equation 1 simplifies to:

$$E_{rms} = 1.29 \times 10^{-10}\ (R\ F)^{1/2} \qquad \text{Equation 2.}$$

2. Peak-to-peak meter indications are of more interest than the rms value. Experimentally, the peak-to-peak Johnson noise is about five times the rms value. At room temperature, equation 2 becomes:

$$E_{pp} = 6.45 \times 10^{-10}\ (R\ F)^{1/2} \qquad \text{Equation 3.}$$

where E_{pp} is peak-to-peak noise voltage developed across the voltage source.

3. The Model 150B bandwidth, F, can be estimated from the response speed, t_r, by:

$$F = 0.35/t_r \qquad \text{Equation 4.}$$

The response speed varies with the range used and the source resistance. On the 1-microvolt range when the source resistance is less than 33 kilohms, for example, the bandwidth is greater than .07 Hz. The maximum specified response speed for this situation is 6 seconds, so the .07 Hz bandwidth is a minimum value.

b. In general, good wirewound or low-noise metal-film resistors approximate ideal resistors, and equations 2 and 3 are nearly correct. If the source resistance is composed of other materials, it may be necessary to include other terms in the equations to account for flicker, 1/f, and current noise over and above the thermal noise.

c. As seen in equations 2 and 3, the noise of even low resistance values becomes significant in the microvolt region. The noise in non-ideal resistors is even greater. Therefore, keep the source resistance as low as possible. Other effects of very high source resistance are decreased response speed and added pickup of extraneous voltages.

2-12. INPUT RESISTANCE. The Model 150B is a feedback amplifier; its input resistance is obtained using high feedback factors. When the source resistance exceeds the amplifier's physical input resistance — amplifier input resistance without feedback — the feedback is partially destroyed. Then the instrument may not operate properly. Normally, do not exceed the maximum source resistance listed in Table 4. Higher resistances can be used, but noise, offsets, slow response and instability may result. On the most sensitive ranges, the maximum specified source resistance is consistent with Johnson noise considerations.

2-13. THERMAL EMFS.

a. Thermal emfs (thermo-electric potentials) are generated by thermal gradients between any two junctions of dissimilar metals. These can be large compared to the signals which the Model 150B can measure.

b. Thermal emfs can cause the following problems:

1. Meter instability or zero offset much higher than expected. Note, though, the Model 150B can have some offset (paragraph 2-3).

2. Meter is very sensitive to ambient temperature differences. This is seen by touching the circuit, by putting a heat source near the circuit, or by a regular pattern of instability, corresponding to heating and air conditioning systems or changes in sunlight.

c. To minimize the drift caused by thermal emfs, use the same metal or metals having the same thermoelectric powers in the input circuit. Gold, silver, and low-thermal solder have a thermoelectric power within about ±0.25 μV/°C of copper. This means a temperature inbalance of 1°C between these metals would generate a thermal emf of about 0.25 microvolt. At the other extreme, germanium has a thermoelectric power of about 320 μV/°C, and silicon will develop about 420 μV/°C against copper. Standard physical handbooks contain tables of thermoelectric powers of materials. Since the Model 150B input circuit is made of pure copper, the best junction is copper to copper. However, copper oxide in the junction will cause thermal emfs on the order of 100 nanovolts per °C or less. Also, differences in processing of two pieces of copper can cause thermal emfs of up to 0.2 microvolt per °C. The Model 1483 Kit contains all necessary equipment to make very low thermal copper crimp joints. See paragraph 2-16.

d. Besides using similar metals, thermal emfs can be reduced by maintaining constant temperatures. Keep all circuits from open windows, fans, air conditioning vents and similar sources which vary temperature. Minimize thermal gradients by placing all junctions physically close on a large heat sink. Thoroughly clean all copper leads before making a connection. Crimp together the ends of each copper wire; bolt the lugs for each connection point together; mount all stacks of lugs on a thick metal plate having high thermal conductivity. Thermal conductivity between the junctions and the heat sink can be kept at a high level by using mica washers or high conductivity ceramics for electrical insulation.

e. Several other techniques will reduce the effects of thermal emfs. Use the zero suppression circuit to buckout constant voltages. If connections must be soldered, use only cadmium-tin low-thermal solder, such as supplied in the Model 1483 Kit. If cadmium solder is used for connections, make sure the soldering iron used is clean and that it has not been used with regular solder before. Use only Rosin solder flux. If possible, heat sink all cadmium-soldered joints together to reduce thermal emfs. Unlike metals — including regular solder — may be used and low thermal emfs obtained if a well-controlled oil bath or a good heat sink is used. Thermal voltages may be calculated from the thermoelectric power of the materials in the junction and the possible temperature difference between the junctions.

2-14. SHIELDING.

a. Due to its narrow bandwidth and filtering, the Model 150B is quite insensitive to ac voltages superimposed upon a dc signal at the input terminals. However, ac voltages which are large compared with the dc signal — thousands of times greater on the more sensitive ranges — may drive the Model 150B ac amplifier into saturation, increasing the noise and erroneously producing a dc output at the demodulator. Therefore, the circuit should be shielded and the shield connected to the Microvolt Ammeter ground particularly for low-level sources.

b. Improper shielding can cause the Model 150B to react in one or more of the following ways:

1. Needle jitter or instability, from 10% to 20% of full scale.

2. High offset (dc bias). Changing the power cord polarity or the connection between the LO and GND terminals may affect the amount of offset.

3. Slow response time, sluggish action and/or inconsistent readings between ranges.

c. To minimize pickup, keep the voltage source and the Microvolt Ammeter away from strong ac magnetic sources. Connect all shields together at the low side of the input or at the LO terminal. The voltage induced due to magnetic flux is proportional to the area of the loop. Therefore, minimize loop areas in the shield connections as well as the input circuitry. Connect the shield at only one point. Run all wires in the circuit along the same path, so the loop area is only the small difference in position of two adjacent wires.

d. Strong third harmonic magnetic fields — 180 Hz for 60 Hz units — may create an 8 Hz beat at the Microvolt Ammeter output and meter. To reduce this effect, turn off all possible nearby sources, such as heavy-duty transformers. Remove the Model 150B and the measuring circuit as far as possible from the magnetic field. If removal does not greatly reduce the beat, magnetic as well as electrostatic shielding around the circuit may be necessary. The ratio of the 8 Hz amplitude to the dc output level may be reduced by nearly 1 decade using the 100mV filtered output.

NOTE

A very convenient way to reduce this 8 Hz beat is to use the Keithley Model 399 Isolating Amplifier with the Model 150B. The Model 399 will reduce this beat by a factor of 10. Refer to Section 6 for more on the Model 399.

2-15. OPERATING FROM SOURCE OTHER THAN 117V, 60 Hz.

a. If the ac power source is 234 volts, use a screw-

driver to change the Line Voltage Switch on the back panel. Change the fuse from 1/8 ampere to 1/16 ampere. Use only 250-volt MDL fuses. No other adjustment is necessary.

b. The Model 150B can operate satisfactorily from 60 or 50 Hz sources, but the best ac rejection is achieved when the filter is set for the line frequency. For 50 Hz ac power sources, change the two resistors in the input filter R147 and R148 (Figure 18). Use Keithley part R132-1273 (R147 and R148) for 50 Hz. Some units are, perspecial order, modified at the factory for 50 Hz ac power sources. The filter in these cases is adjusted for 50 Hz, and this fact is indicated on the rear panel of the Model 150B.

2-16. ACCESSORIES FOR INPUT CONNECTIONS.

a. The easiest way to connect the voltage source to the Model 150B input is with the Model 1506 Input Cable supplied with the instrument. Use the Cable for temporary setups, for measurements at several points, and when fast connections are needed. The Model 1506, which has alligator clips, connects directly to the INPUT Receptacle.

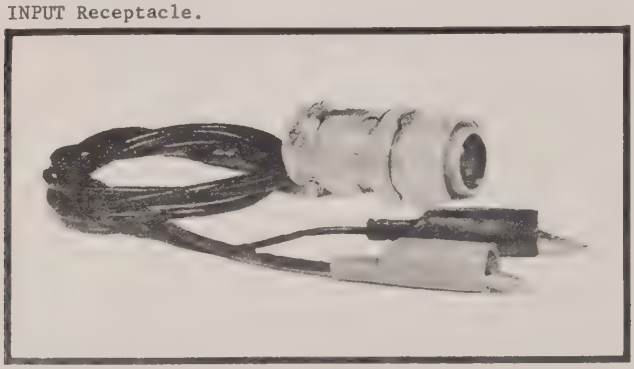

FIGURE 3. Model 1506 Low-Thermal Input Cable.

b. Where more permanent setups are needed, use the Model 1507 Input Cable. It is similar to the Model 1506, except it has spade lugs instead of alligator clips.

c. Use crimp connections with copper wire and lugs for the best low-thermal joints. The Model 1483 Low-Thermal Connection Kit contains a crimp tool, shielded cable, an assortment of copper lugs, copper wire, cadmium solder and nylon bolts and nuts. It is a complete kit for making very low-thermal measuring circuits. The Kit enables the user of the Model 150B to maintain the high thermal stability of the Microvolt Ammeter in his own circuit.

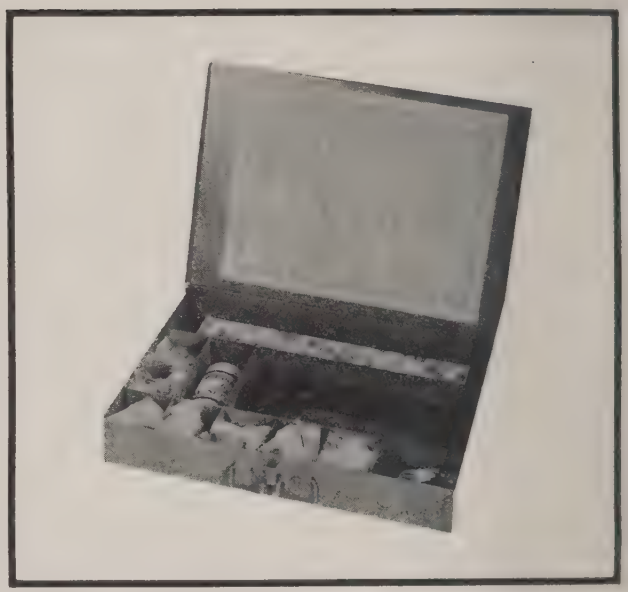

FIGURE 4. Model 1483 Low-Thermal Connections Kit.

d. The Model 1486 male low-thermal input connector is for connecting custom-made circuits to the Model 150B.

e. Other available accessories are: The Model 1484 Refill Kit, which contains replacement parts for the Model 1483; the Model 1485 female low-thermal input connector to use with the Model 1486 for building shielded low-thermal circuits; Model 1488 Low-Thermal Shorting Plug, which is helpful in testing the Model 150B; Model 1489, which is a replacement nickel-cadmium battery pack.

f. Model 1481 or Model 1482 Input Cable, supplied with the Keithley Models 147 and 148, may be used with the Model 150B. The shielding in these cables, however, is not as good as the shielding in the Models 1506 and 1507 Input Cables. Shielding problems occur with the Models 1481 and 1482 Cables at source resistances greater than 10 kilohms.

SECTION 3. CIRCUIT DESCRIPTION

3-1. GENERAL.

a. The Model 150B consists of a chopper demodulator system followed by a dc amplifier. Feedback is applied to the whole loop. (See Figure 5).

b. A mechanical chopper converts the dc input signal to a 94 Hz signal. The ac signal is amplified, demodulated, dc amplified and applied to the meter and the output. A feedback network samples the signal at the output and compares it to the input. The dc input signal and the feedback signal are compared in the input transformer primary. The transformer increases the voltage-difference signal between the two. The ac amplifier amplifies the difference signal. The ac signal is then demodulated by a saturated transistor switch and enters a dc amplifier, which has a feedback capacitor to filter out the demodulator ripple. The dc amplifier output is connected to the meter, the output terminals and the feedback network. The feedback resistors determine full-scale range. The zero suppress signal is connected to the feedback point in the input circuit.

c. The power source for the Model 150B is either line voltage or the rechargeable battery. Voltage from either source is applied to a regulator, then to an inverter, then to two supplies (which provide large amounts of filtering) and a demodulator and chopper drive. The two supplies furnish power to the amplifier circuits. There is also a battery charging circuit to charge the battery when the line voltage is connected.

NOTE

The circuit designations referred to in this section are for Schematic Diagrams 20986E and 20357D found at the back of the manual.

3-2. INPUT CIRCUIT.

a. The dc input signal is connected through the high terminal of the INPUT Receptacle, J104, through the input filter to the center contact of the mechanical chopper, G101. (See Figure 6). The feedback signal is applied to the center tap of the input transformer, T101. The chopper alternately applies a positive and a negative square-wave signal across each half of the primary. The magnitude of the square wave is proportional to the difference between the dc input and the feedback signal. T101 increases the magnitude of this signal and applies it to the gate of transistor Q115.

b. The input compartment is designed to insure high thermal stability and to minimize internal ac pickup.

1. Thermal stability is obtained in part by using only copper wire interconnections in the input circuitry. Connections between components are made with low-thermal cadmium solder. Special low-thermal resistors are used in the filter and in the low-level section of the feedback loop. The switches use standard contacts and rotors, gold plated for low-thermal emfs and high reliability.

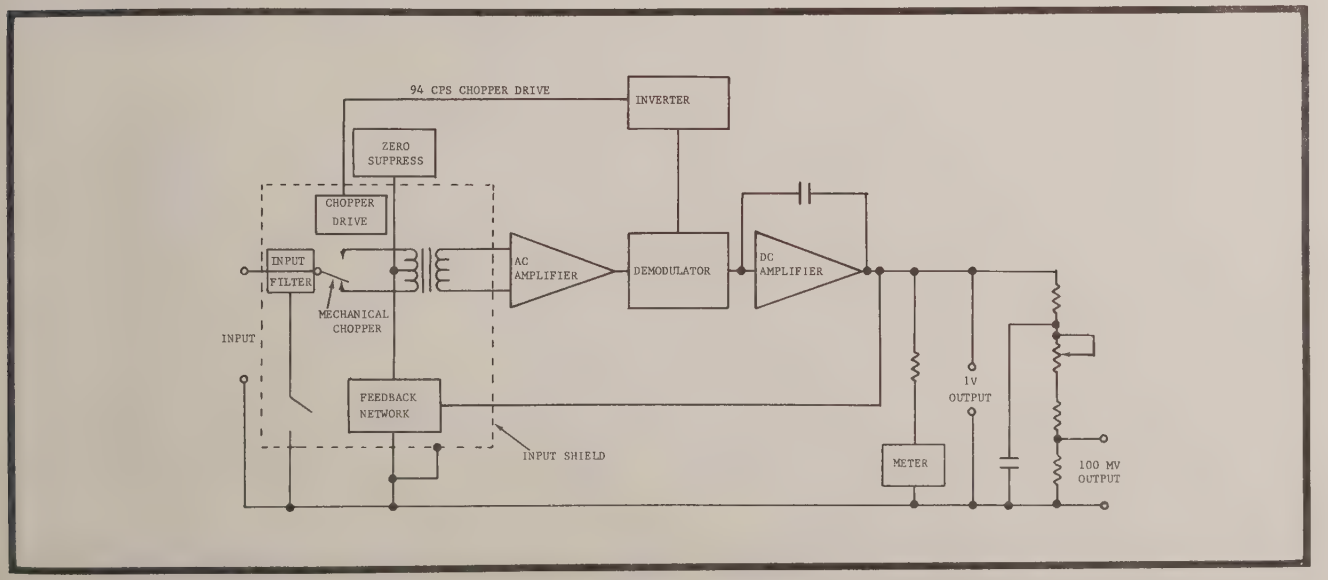

FIGURE 5. Block Diagram of Model 150B Amplifier Circuits.

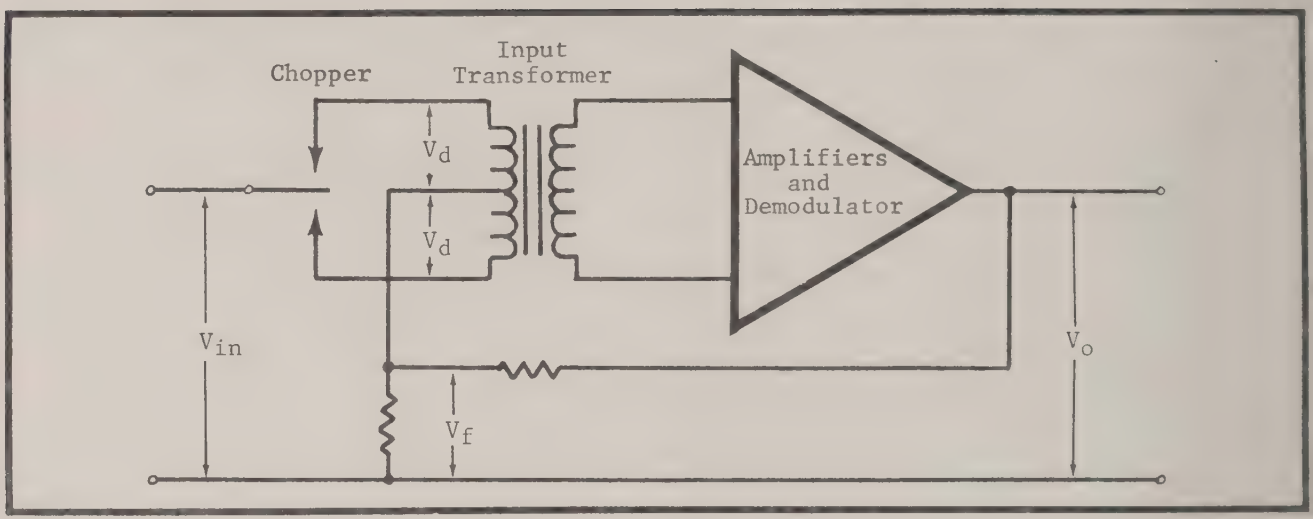

FIGURE 6. Model 150B Input Circuit. The dc input signal, V_{in}, is applied to the mechanical chopper. The feedback signal, V_f (the dc amplifier output voltage, V_o, times the feedback ratio, β), is applied to the transformer primary. The signal, V_d, stepped up by the transformer is the difference between the two, $V_d = V_{in} - V_f$. When the dc input signal is initially applied to the Model 150B, V_f is zero and the voltage across the primary is entirely V_{in}. As the output voltage rises, V_f increases and V_d decreases to a small value, $V_f = V_{in}$, or $\beta V_o = V_{in}$. Only β , which depends upon the RANGE and FUNCTION Switch settings, determines the amplifier gain.

2. The input compartment is shielded against magnetic and electrostatic pickup on all sides. The wires are physically placed to maintain minimum loop area, further minimizing pickup.

c. The feedback network is formed from the output of the dc amplifier back to the center tap of the primary of transformer T101. The RANGE Switch, S104, selects the feedback ratio used for each range.

3-3. AC AMPLIFIER.

a. The ac amplifier circuit amplifies the 94 Hz difference signal which corresponds to the dc input signal. The signal is applied to the gate of transistor Q115 and amplified. Transistor Q101 further amplifies the signal and transistor Q102 is for impedance matching. Q103 amplifies the signal further and drives the 94 cycle twin-tee feedback network. Transistor Q104 is used for impedance matching at the output of this twin-tee network and also drives the feedback point, which is the junction of resistor R102 and the secondary winding of T101. This feedback voltage is added to the 94 cycle voltage from the secondary of transformer T101 and together the sum is applied to the gate of transistor Q115. The gain of transistor Q115 through Q103 is varied by shunting resistor R110 with Resistors R156 through R161. The signal is then amplified by transistors Q105 through Q107. Potentiometer R118 adjusts the gain of Q115 through Q107 to compensate for beta variations. Transistors Q106 and Q107 also form a full wave signal for demodulation.

b. The input transistor, Q115, along with transistors Q101, Q102 and Q103 are selected for low-noise operation at 94 Hz. A narrow bandwidth around 94 Hz is provided. The frequency to be amplified by the first stage is selected to be 94 Hz (TT ADJ Controls, Potentiometers R140 and R143) by a notch filter in a feedback loop around the first stages.

3-4. DEMODULATOR. Transistors Q108 and Q109 in inverted configuration form a transistor switch demodulator. They convert the 94 Hz wave from the ac amplifier into a dc voltage with ripple component. Resistors R127 and R128 sum the voltages from each to form a full-wave rectified signal. The secondary of the inverter transformer, T201, furnishes a square-wave drive for the demodulator.

3-5. DC AMPLIFIER.

a. The demodulator signal is amplified by two low-drift, high gain silicon transistors, Q110 and Q111, in differential configuration to compensate for temperature drift. Silicon transistors Q112 and Q113 form the second amplifier stage. Total gain is about 500. The second amplifier stage is followed by output transistors Q114 and Q116.

b. A feedback loop with capacitors C109 and C120 around the dc amplifier acts as an integrator, filtering the ripple component of the demodulated waveform. The effective capacity, which is approximately the value of C109 and C120 times the dc amplifier gain, and the feedback factor (or open-loop gain) of the entire amplifier, Q115 to Q116, determine the response speed of the system. The capacitive feedback also reduces the noise in the amplifier outside the system bandpass.

3-6. ZERO SUPPRESSION. The zero suppress circuit provides a regulated voltage from the power supplies to buckout steady background potentials in the input sig-

nal. The 10-turn FINE Control, Potentiometer R307, is connected between -12 and +12 volt outputs. The rotor of potentiometer R307 is connected to a resistive divider R187, R301, R302 and R303 in the COARSE Switch which further divides the voltage. The suppression voltage is applied directly to the feedback resistor, R165, which acts as another divider in conjunction with R149.

3-7. POWER SUPPLIES (see Figure 7). The power supply for the Model 150B consists of a regulated supply which operates from the power transformer or a rechargeable battery. The output of this regulator feeds an inverter, two highly filtered supplies with outputs of +12, -12 volts and a drive circuit for the chopper and demodulator. These power all the other Model 150B circuits.

a. The line power, battery and battery charging circuits are controlled through the POWER SUPPLY Switch, S201. When the switch is in AC, the battery is charged and the power supply operates from the power transformer, T202. When the switch is in OFF, the battery charges; all other circuits are off. When the switch is in BATTERY, the power supply operates from the battery; the power transformer is disconnected at its primary windings.

b. The regulated supply is prefiltered with a large capacitor, C211. The supply consists of a series regulator with a Darlington pass arrangement made up of Q218, Q212 and Q214. Any variation across the output is referenced by resistors R234 and R238 with zener diode D211 and compensated for by the amplifier consisting of Q215, Q216 and Q217. The output of the supply is adjustable around -5 volts.

c. Voltage from the regulated supply is applied to the inverter circuit. Transistors Q201 and Q202 form a switching network to supply a square-wave voltage to transformer T201. The switching frequency is 94 Hz, the same as the carrier frequency. Transformer T201 has a saturable ferrite core. The inverter circuit supplies voltages to the two regulated supplies and the chopper demodulator circuit.

d. The +12 volt supply is a highly filtered voltage taken from the secondary windings of the inverter transformer, T201. Diodes D201 and D202 full wave rectify the signal from the transformer. This signal is filtered by the RC filter, R204 and C203. A Darlington configuration, transistors Q203 and Q204, maintains the low-ripple voltage at the supply output. A current limiting circuit, transistor Q205, protects the pass transistor if the output of the supply is shorted.

e. The -12 volt supply operates in a similar manner to the +12 volt supply.

f. One secondary of the inverter transformer drives transistors Q209 and Q210 through a phase compensating network made up of resistors R220 through R224 and capacitor C210. This phase compensation network compensates for the chopper-phase shift. Transistors Q209 and Q210 are alternately cut off and driven into saturation, forming a square wave drive to the demodulator. The drive for the chopper is taken from one-half of the secondary of the inverter transformer that is used to drive the demodulator. Capacitor C213 "rounds off" the square wave to produce a more acceptable chopper drive wave form.

3-8. BATTERY CHARGING CIRCUIT.

a. The battery circuit operates when the POWER

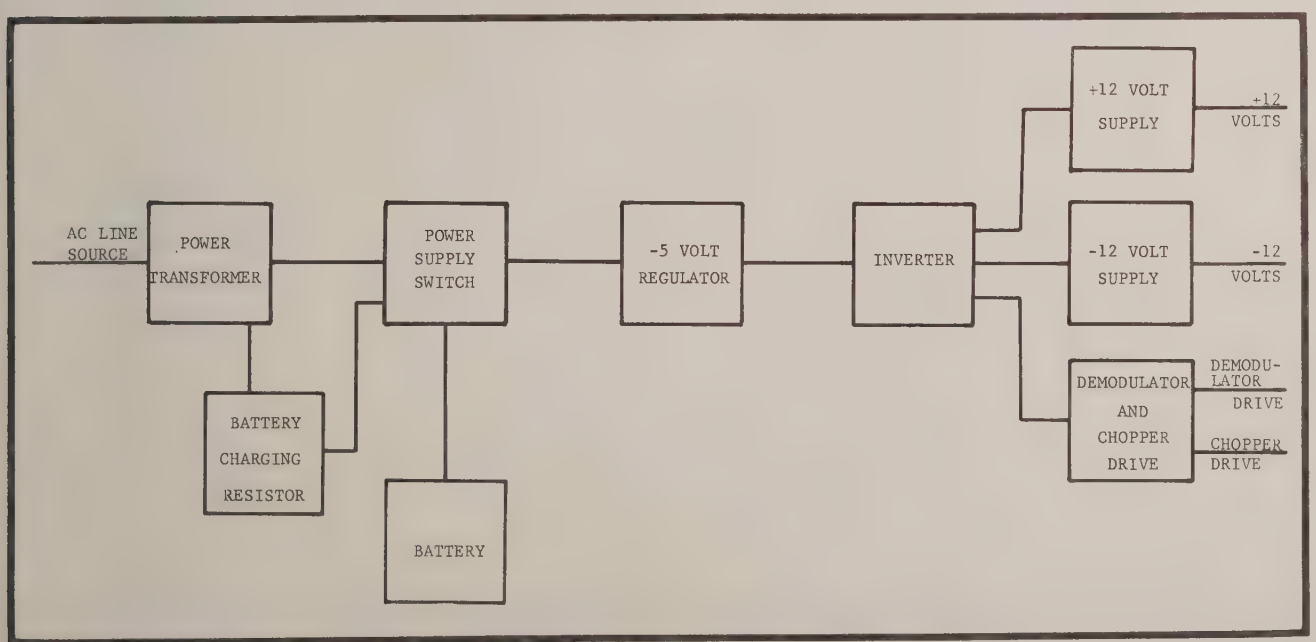

FIGURE 7. Block Diagram of Model 150B Power Supplies.

SUPPLY Switch, S201, is in the AC or OFF position.

b. A charging current from transistor T202 is applied to the battery through a half wave rectifier and a series resistor, R228. A fuse is incorporated in this circuit to protect the instrument and the battery. Note, however, that the battery can be damaged if it is used far beyond its capacity. A polarity reversal of a cell may occur, causing heavy circulating circuits within the battery.

TABLE 6.
Equipment Recommended for Troubleshooting and Calibrating the Model 150B. Use these instruments or their equivalents.

Instrument	Use
Hewlett-Packard Model 200CD Oscillator, 5 Hz to 600 kHz, ±2% accuracy.	TT adjust and Filter adjust calibration.
Hewlett-Packard Model 5512A Electronic Counter, 300-kHz counting rate, ±0.1% accuracy.	Monitor oscillator frequency.
Keithley Instruments 1488 Low-Thermal Shorting Plug.	Short Model 150B INPUT Receptacle.
Keithley Instruments Model 1507 Input Cable.	Connecting cable for Model 260 and Model 150B.
Keithley Instruments Model 260 Nanovolt Source.	Signal source for calibrating Model 150B.
Keithley Instruments Model 261 Picoampere Source.	Signal source for calibrating Model 150B.
Keithley Instruments Model 370 Recorder.	Monitor drift.
Keithley Instruments Model 610C Electrometer.	Circuit check.
Keithley Instruments Model 662 Guarded DC Differential Voltmeter, ±0.01% to 1 millivolt.	Check voltage at output terminals.
RCA Model WV98B Senior Voltohmyst, 11 MΩ input resistance, ±3% accuracy, 0 to 1500 volts dc.	Check dc voltages throughout circuit.
Tektronix Type 503 Oscilloscope, dc to 450 kHz.	Check wave forms for troubleshooting and calibration.

SECTION 4. SERVICING

4-1. GENERAL. Section 4 contains the maintenance and troubleshooting procedures for the Model 150B. Follow these procedures as closely as possible to maintain the accuracy and usefulness of the instrument.

4-2. SERVICING SCHEDULE. The Model 150B requires no periodic maintenance beyond the normal care required of high-quality electronic equipment. Components operate well below maximum ratings. Principal maintenance is an occasional chopper replacement (see paragraph 4-4) and battery replacement.

4-3. PARTS REPLACEMENT. The Replaceable Parts List in Section 7 describes the electrical components of the Microvolt Ammeter. Replace components only as necessary, and use only reliable replacements which meet the specifications. The Model 150B uses no special critical parts except the components listed in Table 7. Make sure parts coded 80164 in the Replaceable Parts List are purchased only from Keithley Instruments or its distributors. Transistors Q110 and Q111 are a matched pair, order only from Keithley Instruments.

TABLE 7.
Model 150B Pre-assembled Components. These parts have lugs crimped on them and the proper lead length. Use only Keithley parts for replacement.

Component	Circuit Desig.	Keithley Part No.
Battery pack assembly	BT201	Model 1489
Mechanical chopper assembly and input connector assembly (see paragraph 4-4).	G101 & J105	20139B
Input transformer assembly	T101	20137B

4-4. MECHANICAL CHOPPER REPLACEMENT.

a. The mechanical chopper is designed for long life. However, since it is mechanical, it will eventually wear and become noisy. At this point, replacement is necessary.

b. Removal Procedures.

1. Disconnect the chopper drive coil at connector J105 (Figure 11). Carefully remove the chopper lugs from the studs mounted on the bottom of the input compartment.

2. Remove the four mounting screws from the bottom of the input compartment. Remove the old chopper.

c. Replacement Procedures.

1. Mount the chopper with the four furnished screws.

2. Dress the leads and draw the lugs down on the studs.

3. Connect the chopper drive coil at connector J105.

4. Check the instrument for proper operation. Follow paragraph 4-8, subparagraph b, steps 1, 2 and 3.

4-5. TROUBLESHOOTING.

a. The following procedures give instructions for repairing troubles which might occur in the Model 150B. Use these procedures to troubleshoot and use only specified replacement parts. Table 6 lists equipment recommended for troubleshooting. If the trouble cannot be readily located or repaired, contact Keithley Instruments or your Keithley field engineer.

b. Paragraphs 4-7 and 4-8 give step-by-step procedures for troubleshooting and checking out the power supply and amplifier circuits. Follow these in the order given. Tables 8 and 11 are troubleshooting tables for these circuits. Also refer to Section 3 to find the more crucial components and to determine their function. The Schematic Diagrams, 20986E and 20357D, contain the voltages at certain points in the circuit; measured with a Model WV98B Voltohmyst.

NOTE

Before troubleshooting inside the Model 150B, check the external circuits (paragraph 4-6). Always check out the power supply circuit before touching the amplifier circuits. The amplifier circuits often appear faulty only because of a defect in the power supply.

4-6. PRELIMINARY TROUBLESHOOTING PROCEDURES.

a. Before troubleshooting, check the outside circuits to the Model 150B. Isolate the Microvolt Ammeter from all external effects:

1. Disconnect all outside circuits from the INPUT and OUTPUT Receptacles, and GND and LO terminals.

2. Connect a low-thermal short across the INPUT Receptacle. The best connector is a Model 1488 Low-Thermal Shorting Plug. The next best is a Model 1506 Input Cable with the clips connected together or the Model 1507 Input Cable with the lugs connected together. Keep the cable as far as possible from ac sources, and avoid a loop where the alligator clips or lugs are connected.

3. Set the ZERO SUPPRESS COARSE Control to OFF.

b. If the battery charge is acceptable (paragraph 2-2), set the POWER SUPPLY Switch to BATTERY. Disconnect the power cord from the power line. Battery operation eliminates many ground-loop connection problems with the test equipment.

c. If ac operation is used, check the Line Voltage Switch for correct position and the Fuse for correct rating.

NOTE

Make sure the power supply circuit is operating correctly before checking the amplifiers. All circuits depend upon properly functioning power supplies. If taken out of order, the resulting adjustment may be faulty.

4-7. POWER SUPPLY CHECK OUT.

a. All circuits depend upon the -5 volt regulated supply. This supply drives the inverter transformer which, in turn, supplies the -12 and +12 volt outputs. Therefore, the -5 volt supply must be operating correctly before further checks are made. If the power supply fails to check out at any point, refer to Table 8. After clearing the trouble, continue to check.

b. Procedures for Checking Regulated Power Supplies.

1. Connect the Model 1488 Low-Thermal Shorting Plug to the INPUT. Set the Model 150B controls as follows:

POWER SUPPLY Switch	OFF
RANGE Switch	1 MICROVOLT
FUNCTION Switch	INPUT R OPEN
ZERO SUPPRESS COARSE Control	OFF
Line Voltage Switch	Set to line voltage
FILTER Switch	IN

2. Turn the FREQ ADJ Potentiometer, R235 (Figure 13) completely counterclockwise. This insures that the chopper will not be damaged.

3. Plug in the power cord.

4. Measure the voltage at the red wire on the POWER SUPPLY Switch front deck. It should be -11 volts dc ±2 volts dc.

5. Turn the POWER SUPPLY Switch to AC. Use the Type 503 Oscilloscope to check the wave form at pin 8 or 9 of connector J201 on the bottom of PC-120 (Figure 11). Wave form should look like Figure 8.

a) The dc voltage at pin 8 or 9 should be -5 volts ±0.3 volt dc. This voltage will be present at pin 8 or 9 if the chopper frequency is 94 Hz.

b) Check the chopper frequency by connecting the Type 503 Oscilloscope differentially at pins A and D on connector J105 (Figure 11). Measure the oscillator frequency with the Model 5512A Electronic Counter set at 94 Hz. Connect the oscillator to the horizontal channel of the Type 503 Oscilloscope and obtain a lissajous pattern. The wave form of the chopper drive should resemble that in Figure 9.

6. Measure the signal levels and ripple with respect to low of the +12 and -12 volt supplies. Table 9 gives the values.

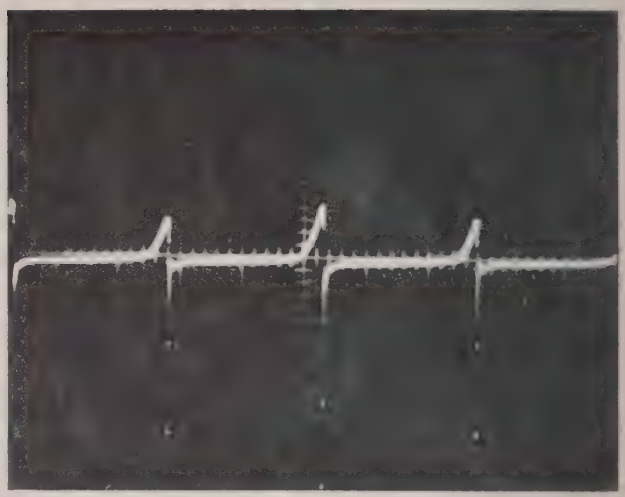

FIGURE 8. Correct -5V Regulated Supply Wave Form at Pin 8 or 9 of Connector J201. See paragraph 4-7. Form was obtained on the 1 μV range with the FILTER Switch set to IN. The scale is 0.2V/cm vertical, 2 msec/cm horizontal.

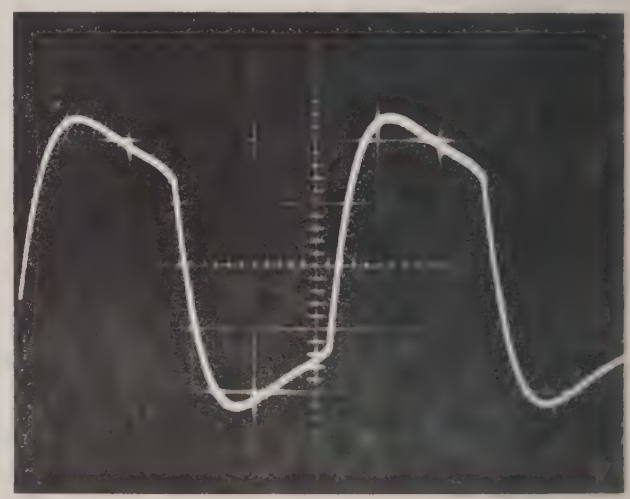

FIGURE 9. Correct Chopper Drive Wave Form at Pins A and D of J105. See paragraph 4-7. Form was obtained on the 1 μV range with the FILTER Switch set to IN. The scale is 5V/cm vertical, 2 msec/cm horizontal.

a) To measure the +12 volt supply, connect the Model WV98B Voltmeter at pin 19 of connector J201, Figure 11.

b) To measure the -12 volt supply, connect the Model WV98B Voltmeter at pin 6 of connector J201, Figure 11.

c) To find the ripple on the supplies, connect

TABLE 8.
Troubleshooting Table for Power Supply.

Trouble	Probable Cause	Solution
No voltage at the black and white wire attached to last pin before strut on S103 (point G, Figure 10).	Blown fuse.	Check for shorted transformer T202 or wiring; then replace fuse.
	D209 or D210 open.	Check components; replace if faulty.
Irregular wave form at pin 8 or 9 (Figure 8).	Regulator circuit not functioning normally.	Refer to Section 3 to determine the components in the regulator circuit. Check these components and replace if faulty.
Incorrect +12 volt supply voltage, or high ripple on this supply.	Defective Q203 and/or Q204.	Check components; replace if faulty.
	Defective C203 and/or C204.	Check components; replace if faulty.
	-5 volt regulator not supplying enough voltage to inverter for 94 Hz.	Change the value of R204; increase the value if the +12 output is low; decrease it (not below 3.9 kΩ) if the +12 output is high.
Incorrect -12 volt supply voltage, or high ripple on this supply.	Defective Q207 and/or Q208.	Check components; replace if faulty.
	Defective C208 and/or C209.	Check components; replace if faulty.
	-5 volt regulator not supplying enough voltage to inverter for 94 Hz.	Change the value of R219; increase the value if the -12 output is low; decrease it (not below 3.9 kΩ) if the -12 output is high.

the Type 503 Oscilloscope to pin 19 or 6. The ripple should be less than 2 mV peak-to-peak.

4-8. AMPLIFIER CHECK OUT.

a. The check out of the amplifier circuits is divided into two parts: operational check and gain calibration. The operational check does not have to be followed by gain calibration. Use this to check the Model 150B operation. If the amplifiers fail to check out at any point, refer to Table 11. After clearing the trouble, continue the check.

NOTE

Check the power supply circuits before adjusting the amplifiers. If extensive changes are made, the amplifier circuit may need recalibration.

b. Operational Check Procedures.

1. Connect the Model 1488 Low-Thermal Shorting Plug to the INPUT RECEPTACLE. Set the front panel controls as follows:

POWER SUPPLY Switch	AC
RANGE Switch	1 MICROVOLT
FUNCTION Switch	INPUT R OPEN
ZERO SUPPRESS COARSE Control	OFF
ZERO SUPPRESS FINE Control	Approx. centered
FILTER Switch	IN

2. On the 1-microvolt range, the meter offset should be less than 0.5 microvolt (50% of full scale). It may be higher if the shorting plug (Model 1488) is not used.

3. Remove the Model 1488 Shorting Plug and leave the Model 150B input open. Set the FUNCTION Switch to INPUT R 100K. Connect the Type 503 Oscilloscope to the Model 150B 1V OUTPUT. Set the oscilloscope amplifier to dc coupling, 0.2 volt/cm, time base to

TABLE 9.
Signal Level, Maximum Ripple and Resistance for Regulated Power Supplies.

Regulated Power Supply	Test Point, Figure 11	Signal Level, Volts dc	Maximum Ripple, Millivolts Peak-to-Peak	Resistance to Ground, Ohms
+12 volt	pin 19, J201	11 to 12.5	1.5	850 ±100
-12 volt	pin 6, J201	11 to 12.5	2.0	460 ±70

TABLE 10.
Range Checkout. If any ranges fail, check the listed resistors.

Voltage RANGE	Resistors used in RANGE Switch	Current RANGE	Resistors used in RANGE Switch
0.3 μV	R164 through R167	0.3 nA	R172, R164, R165, R167, R174
1 μV	R164, R165, R167, R168	1 nA	R172, R164, R165, R167, R175
3 μV	R164, R165, R167, R169	3 nA	R172, R164, R165, R167, R176
10 μV	R164, R165, R167, R170	10 nA	R172, R164, R165, R167, R177
30 μV	R164, R165, R167, R171	30 nA	R172, R164, R165, R167, R178
100 μV	R164, R165, R167, R172	100 nA	R172, R164, R165, R167, R179
300 μV	R164, R165, R167, R173	300 nA	R172, R164, R165, R167, R180
1 mV	R165, R168	1 μA	R165, R168, R179
3 mV	R165, R169	3 μA	R165, R168, R180
10 mV	R165, R170	10 μA	R165, R168, R181
30 mV	R165, R171	30 μA	R165, R168, R182
100 mV	R165, R172	100 μA	R165, R168, R183
300 mV	R165, R173	300 μA	R165, R168, R184
1 V	R165	1000 μA	R165, R168, R185

1 second/cm. Set the Model 150B to the 3-microvolt range. Set the ZERO SUPPRESS COARSE Control to 1 and adjust the ZERO SUPPRESS FINE Control to obtain a 3-microvolt signal. The response time (from 10% to 90% of final value) should be approximately 6 seconds. Adjust Gain Control Potentiometer R118 (Figure 15) for this value.

c. Gain Calibration Procedures.

1. Connect the Model 260 Source to the Model 150B input with the Model 1507 Input Cable.

2. Connect the Model 662 Differential Voltmeter to the Model 150B 1V OUTPUT Receptacle.

3. Before turning the Model 260 POLARITY Switch to + or -, adjust the ZERO SUPPRESS Controls for zero output at the output terminals. Set the Model 662 to the 5-volt range. Use the Model 662 to determine the zero output.

4. For a given full-scale input signal, measure the output voltage. Check each range and rezero the output using the ZERO SUPPRESS Controls before each check. The output should be 1 volt dc ±1% for all ranges. If for any range the output is not 1 volt ±1%, refer to Table 10 and check the resistors for that range. Replace any faulty resistor.

TABLE 11.
Amplifier Troubleshooting Table. This Table assumes that the Model 150B has a Model 1488 Shorting Plug on the input, and that only test instruments are connected to it.

TROUBLE	PROBABLE CAUSE	SOLUTION
High zero offset	Short in feedback network.	Make sure lugs do not touch each other or the input compartment.
	Gain adjustment not set correctly.	Adjust GAIN Potentiometer, R118, for a response speed of 6 seconds on the 3 μV range. With 100K across the input, see paragraph 4-8b.
Random zero drift, one hundreds of nanovolts or more, sometimes reduced if the cabinet is slapped. Response speed is within specification.	Noisy chopper.	Replace chopper; see paragraph 4-4.
Zero drift greatly affected by slight movement of FUNCTION Switch within a setting.	Dirty FUNCTION or RANGE Switch	Carefully clean switch contacts and rotors. If this does not cure the problem, return to Keithley Instruments, Inc., for switch replacement.

TABLE 11. (Cont'd.)

Amplifier Troubleshooting Table. This Table assumes that the Model 150B has a Model 1488 Shorting Plug on the input, and that only test instruments are connected to it.

TROUBLE	PROBABLE CAUSE	SOLUTION
Zero drift very temperature sensitive.	Contaminated INPUT Receptacle, shorting plug, or connection in input compartment.	Clean INPUT Receptacle with non-metallic abrasive. If contamination goes below plated surface, replace connector. Clean lugs with non-metallic abrasive; be sure to return to posts in original order.
Response speed very slow, possibly offset also high. Cannot adjust to specifications with R112.	Low ac amplifier gain, due to bad active element.	Set to 1-microvolt range, ZERO SUPPRESS COARSE to 1, FINE to an easily readable signal. With oscilloscope, check for square wave at Q115 base, and sine wave at input and output of each succeeding stage. Reduce zero suppression as necessary to prevent saturation. Check dc voltages through Q107, given on schematic. Replace faulty components.
Response speed very slow, possibly offset also high. Cannot adjust to specifications with R118.	Low gain in dc amplifier.	Unsolder and lift one end of R127, R128, and C109. See points M and N, Figure 15. Apply 1 to 100 mV to base of Q110 to zero meter. Change input by 1 millivolt; output should shift 0.5 to 1 volt. If not, or if more than 100 mV is required to zero, check transistors beginning with Q110 and Q111. Q110 and Q111 are matched for offset. Replace only with parts purchased from Keithley.
	Leaky or shorted C109 and/or C120.	Check; replace if faulty.
Demodulator does not "clamp" during one-half cycle.	Defective Q108, Q109, Q209 or Q210.	Check for square wave at collector of Q209 and Q210 and base of Q108 and Q109. Replace faulty components.
All microvolt ranges out of calibration. The millivolt ranges are good.	R164 or R165 out of tolerance.	Check resistors; replace if faulty.
All ranges are out of calibration.	R165 out of tolerance.	Check resistor; replace if faulty.
One range out of calibration.	Corresponding resistor in Table 10 out of tolerance.	Check resistor; replace if faulty.
When connected in measuring circuit, meter needle oscillates in ac and/or battery operation even with filter in.	Too much 60 Hz at input.	Reduce 60 Hz appearing at the input by shielding and grounding as described in paragraph 2-14.

SECTION 5. CALIBRATION

5-1. GENERAL.

a. The following procedures are recommended for calibrating the Model 150B. Use the equipment recommended in Table 6. If proper facilities are not available or if difficulty is encountered, contact Keithley Instruments, Inc., or its representative to arrange for factory calibration.

b. The following procedures are covered: accuracy check, meter, meter noise, current compensation, TT Adjust and Filter adjust calibration and drift verification.

c. If the Model 150B is not within specifications after calibration, follow the troubleshooting procedures or contact Keithley Instruments, Inc., or its representative.

5-2. ACCURACY CHECK. To ascertain whether the Model 150B is operating properly, perform an accuracy check of the voltage ranges and current ranges.

a. To check the accuracy of the voltage ranges, follow the procedures of paragraph 2-3. Use the Model 260 as the voltage source and connect the Model 260 to the Model 150B using the 1507 Input Cable. Check each voltage range on the Model 150B by applying a nine-tenths full-scale signal with the Model 260 (i.e. 9 microvolt input signal for the 10 microvolt range; 27 microvolt signal for the 30 microvolt range, etc.). Check each range for both positive and negative polarity. The meter accuracy of the Model 150B is specified to be ±2% of full scale exclusive of noise and drift.

b. To check the accuracy of the current ranges, follow the procedures of paragraph 2-4. Use the Model 261 as the current source and connect the Model 261 to the Model 150B using the 1507 Input Cable. Check each current range on the Model 150B by applying a nine-tenths full-scale signal with the Model 261 (i.e. 9 nanoampere input signal for the 10 nanoampere range; 27 nanoampere input signal on the 30 nanoampere range, etc.). Check each range for both positive and negative polarity. The meter accuracy of the Model 150B is specified to be ±3% of full scale exclusive of noise and drift.

c. If any range fails to be within specifications, check to see if the meter is in calibration (paragraph 5-3). If the meter is in calibration and any range still fails to be within specification, check the indicated resistors in Table 10.

5-3. METER CALIBRATION.

a. Set the Model 150B front panel controls as follows:

POWER SUPPLY Switch	OFF
RANGE Switch	100 MICROVOLTS
FUNCTION Switch	VOLTS (either position)
ZERO SUPPRESS COARSE Control	OFF
ZERO SUPPRESS FINE Control	Approx. centered
FILTER Switch	IN

b. Short the Model 150B input with the Keithley Model 1488 Shorting Plug or some other suitable device.

c. Zero the meter with the Mechanical Zero Control.

d. Turn the POWER SUPPLY Switch to ON and set the ZERO SUPPRESS Control to position 2.

e. Adjust the Model 150B 1V Output to within ±0.1% of full scale as read on the Keithley Model 662 Differential Voltmeter.

f. Adjust the Meter Calibration potentiometer (R151, Figure 17) for a reading of 10 on the Model 150B meter scale.

5-4. METER NOISE CHECK. Set the Model 150B RANGE Switch to 0.3 MICROVOLT. Short the Model 150B input with the Model 1488 Shorting Plug or some other suitable device. Check the meter noise. The meter noise should be less than 25 nanovolts peak-to-peak. If it is not, then possible sources of noise are transistors Q101 and Q115, the chopper, power supply, and cadmium solder joints.

TABLE 12.
Model 150B Internal Controls. The Table lists all the controls, the figure picturing the location, and the paragraph describing the adjustment.

Control	Circuit Desig.	Fig. Ref.	Refer to Paragraph
Gain control	R118	15	4-8
TT adjust	R140 & R143	15	5-6
Filter adjust	R146	18	5-7
Meter Cal.	R151	17	5-3
Frequency adjust	R235	13	4-7
Current Comp. adjust	R304	10	5-5

5-5. CURRENT COMPENSATION CALIBRATION.

a. Set the Model 150B front panel controls as follows:

POWER SUPPLY Switch	OFF
RANGE Switch	10 MICROVOLTS
FUNCTION Switch	VOLTS, INPUT R 100K
ZERO SUPPRESS COARSE Control	OFF
ZERO SUPPRESS FINE Control	Approx. centered
FILTER Switch	IN

b. Short the Model 150B input with the Keithley Model 1488 Shorting Plug or some other suitable device.

c. Turn the POWER SUPPLY Switch to ON. Allow the Model 150B to warm up for 10 minutes and reach thermal equilibrium.

d. Zero the Model 150B using the ZERO SUPPRESS Controls.

e. Remove the short from the input.

f. Adjust the Current Compensation Adjust (R304, Figure 10) for null. A few tenths of a microvolt instability is to be expected.

5-6. TT ADJUST CALIBRATION.

a. Set the Model 150B front panel controls as follows:

POWER SUPPLY Switch	OFF
RANGE Switch	1 MICROVOLT
FUNCTION Switch	VOLTS (either position)
ZERO SUPPRESS COARSE Control	OFF
ZERO SUPPRESS FINE Control	Approx. centered
FILTER Switch	IN

b. Apply 10 volts peak-to-peak to the input of the 94 Hz filter (pin 3 to pin 1 of PC-155, Figure 14) with the Model 200CD Oscillator.

c. Adjust TT ADJ potentiometers R140 and R143 (Figure 15) for minimum signal at the output, pin 6 of PC-155. Monitor the output signal with the Model 503 Oscilloscope. The output signal should be about 250:1 less than the input, typically 40 mV or less, and contain very few 94 Hz voltages.

5-7. FILTER ADJUST CALIBRATION.

a. Keep the Model 150B front panel controls the same as in paragraph 5-6.

b. Apply 10 volts, peak-to-peak, 60 Hz (or 50 Hz if designated on rear panel) to the Model 150B INPUT Receptacle with the Model 200CD Oscillator.

c. Adjust FILTER ADJ potentiometer R146 (Figure 18) for minimum voltage at the output of the filter (junction of resistor R148 to low). Monitor the output with the Model 503 Oscilloscope. The filter rejection ratio should be about 300:1, typically 30 mV peak-to-peak or less. The output may still contain some line frequency signal.

5-8. DRIFT VERIFICATION. Make sure the Model 150B cover is on. Short the Model 150B input with the Model 1488 Low-Thermal Shorting Plug. Set the Model 150B RANGE Switch to 0.3 MICROVOLT. Connect the Model 150B to the Model 370 Recorder. After a 1-hour warm-up the drift should be less than 0.1 microvolt per 24 hours. Excessive drift may be indicative of a faulty battery.

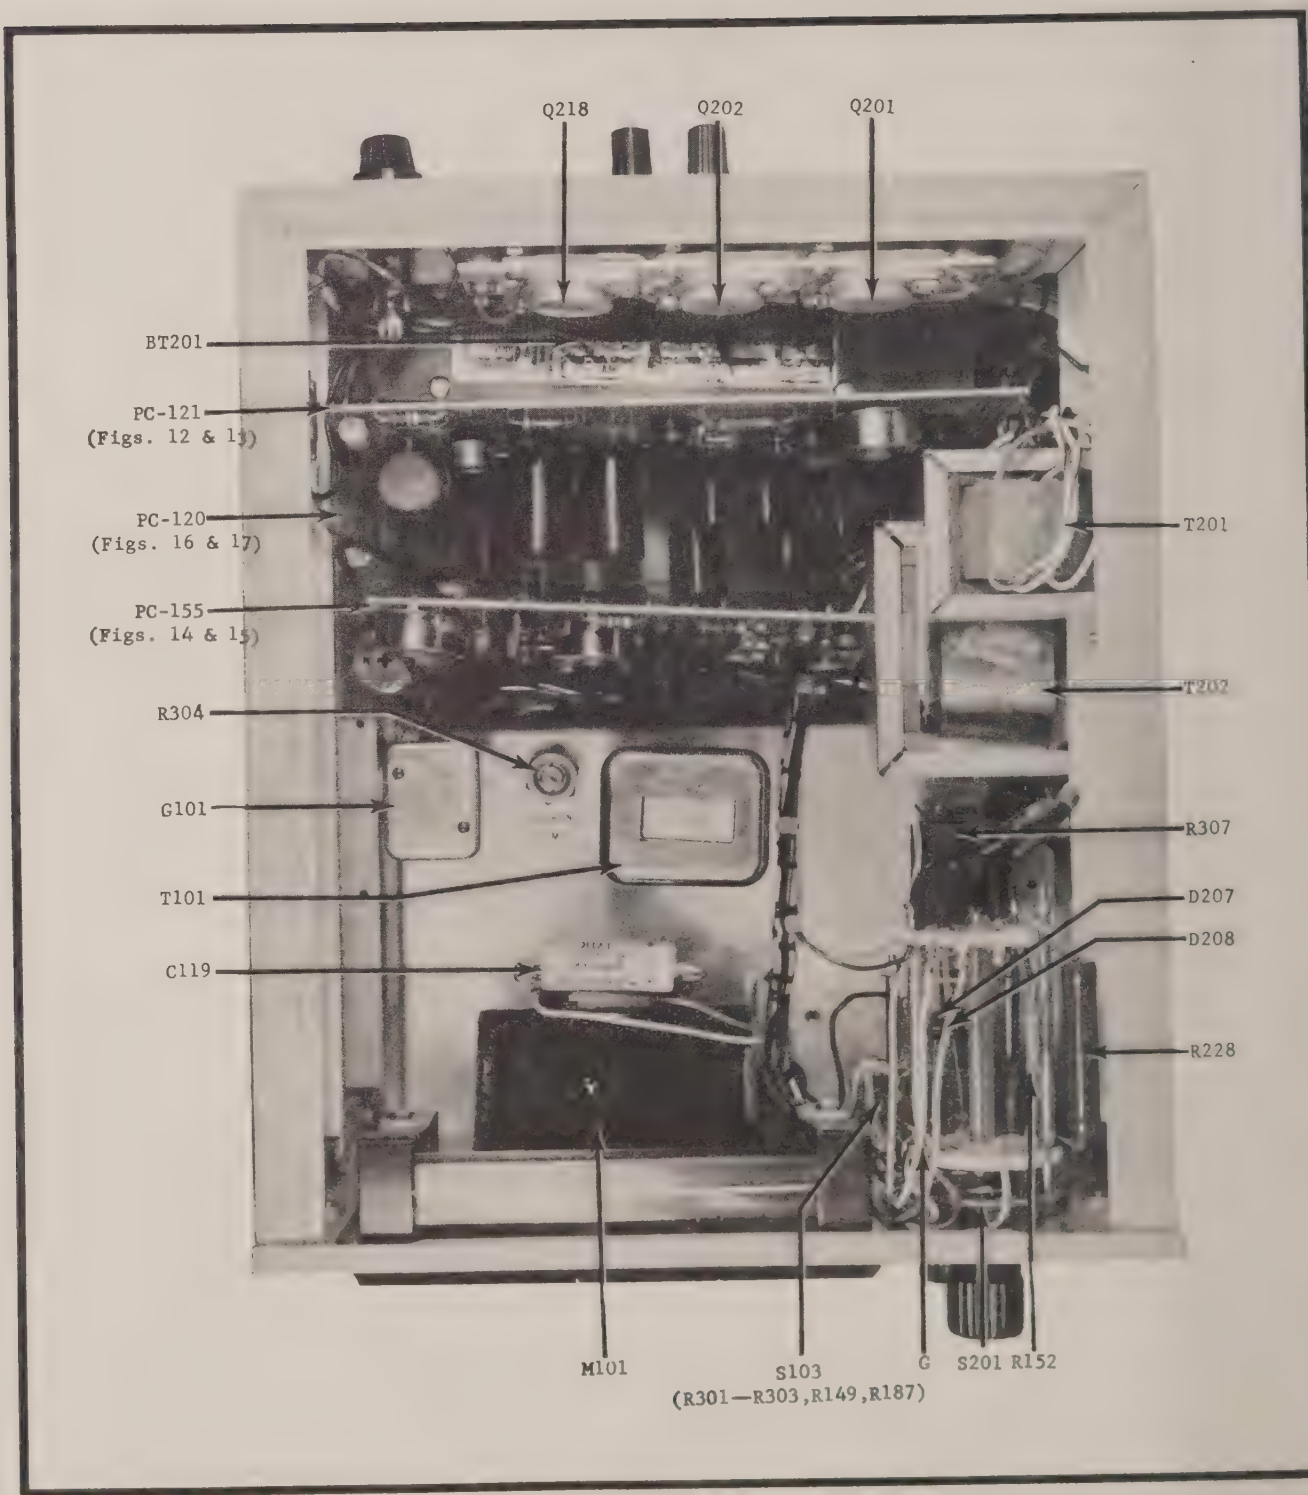

FIGURE 10. Top View of the Model 150B Chassis. Front panel faces down. Location of components, printed circuits and switches is shown. Refer to Replaceable Parts List and schematic diagrams for circuit designations. Figure 11 shows the bottom view.

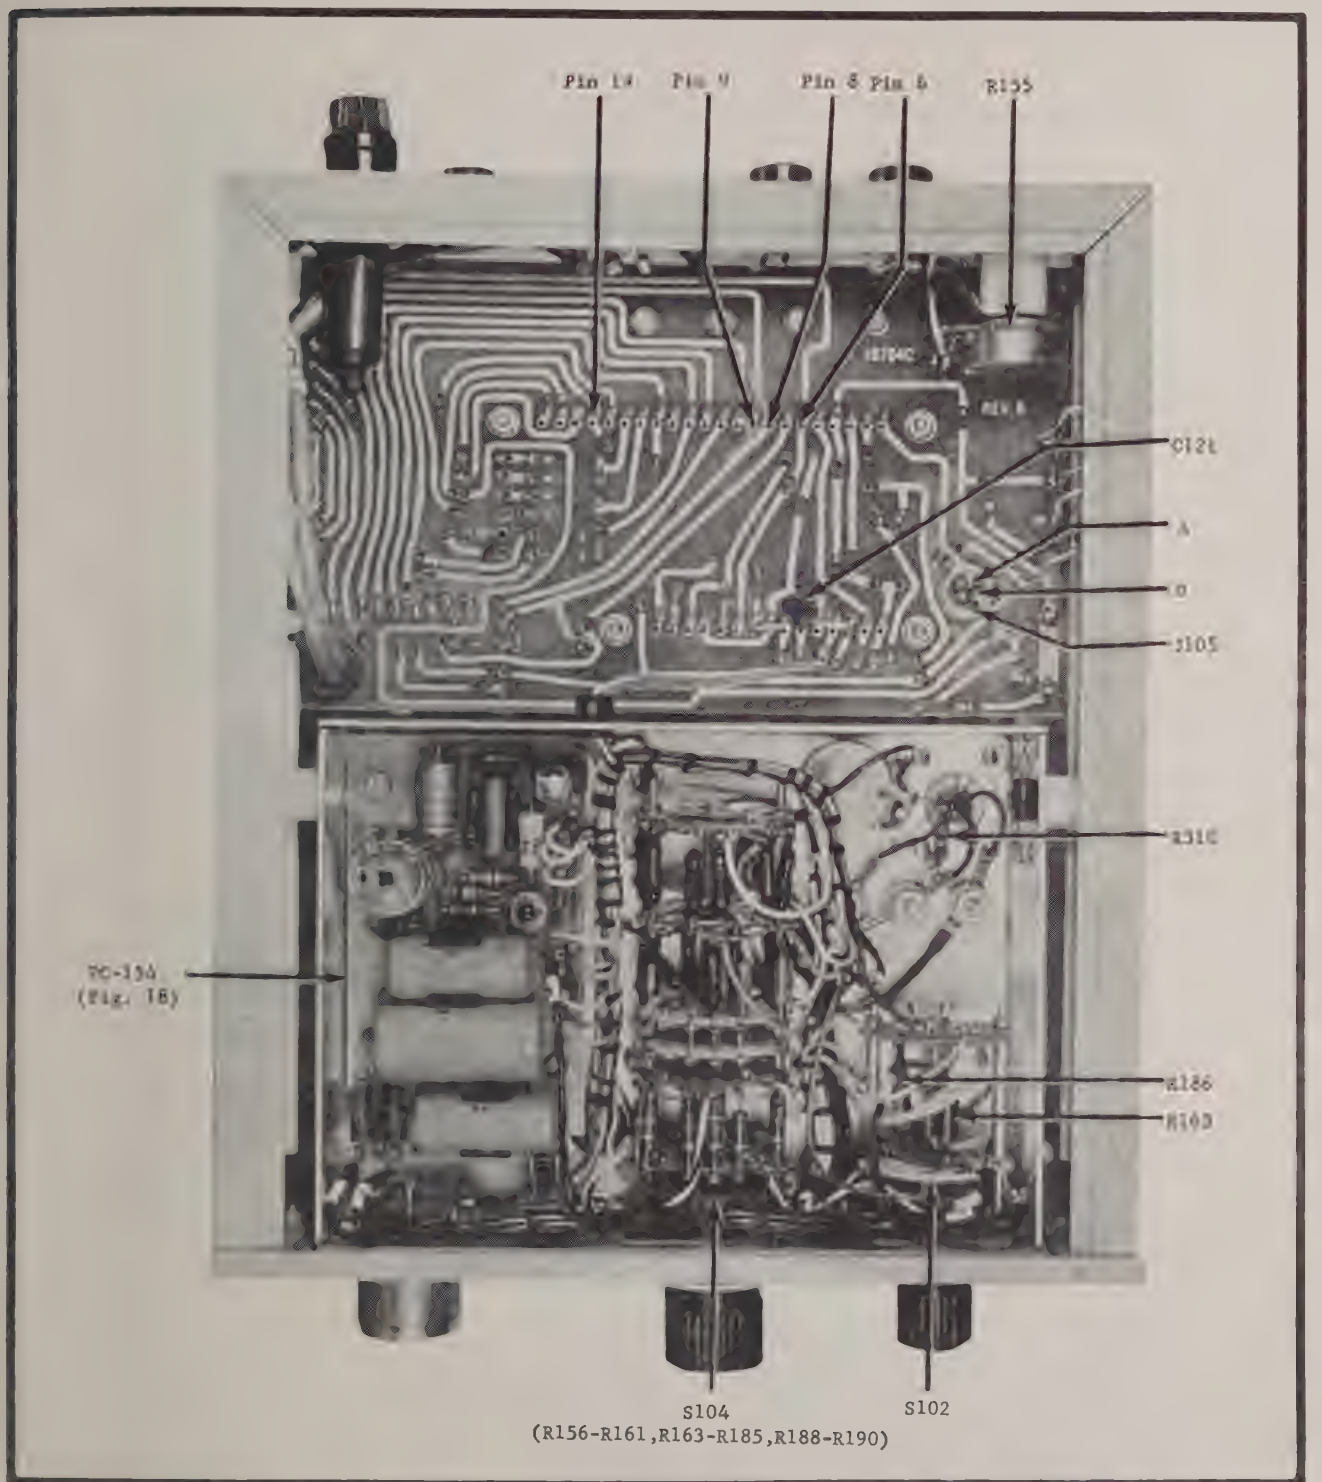

FIGURE 11. Bottom View of the Model 150B Chassis. Front panel faces down. Location of components, printed circuits, switches and test points is shown. Refer to Replaceable Parts List and schematic diagram for circuit designations. Figure 10 shows the top view.

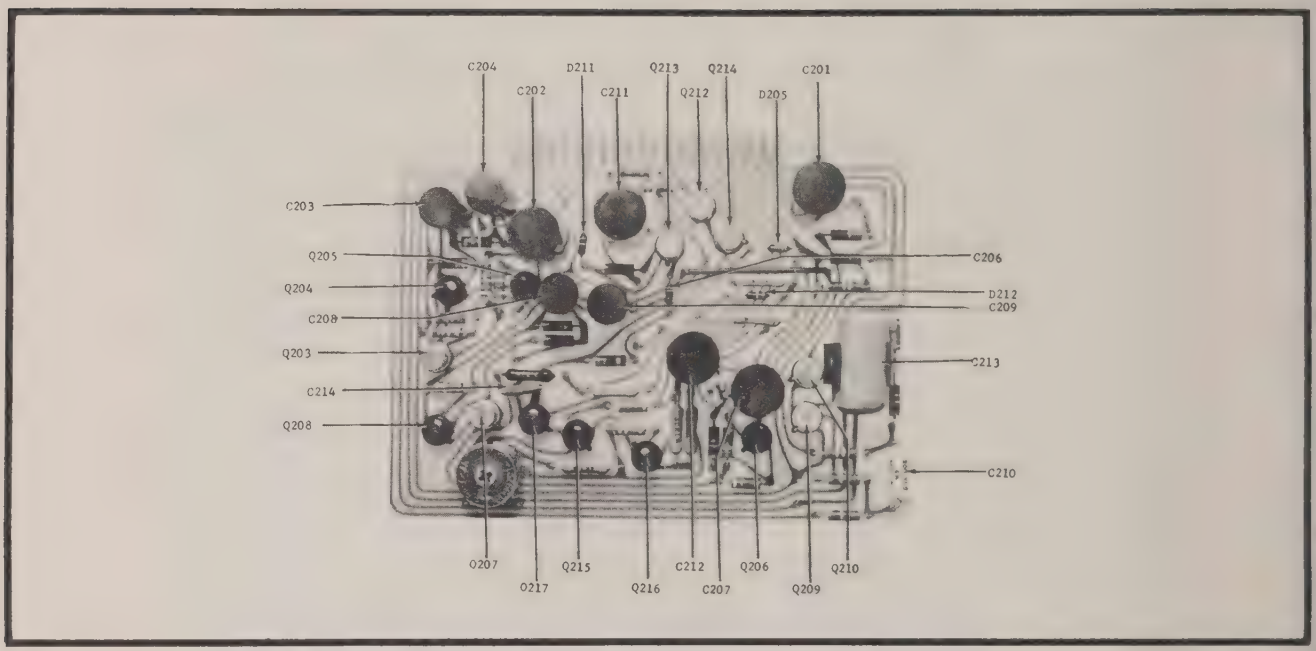

FIGURE 12. Capacitor, Diode and Transistor Locations on PC-121. Refer to Figure 13 for resistor locations.

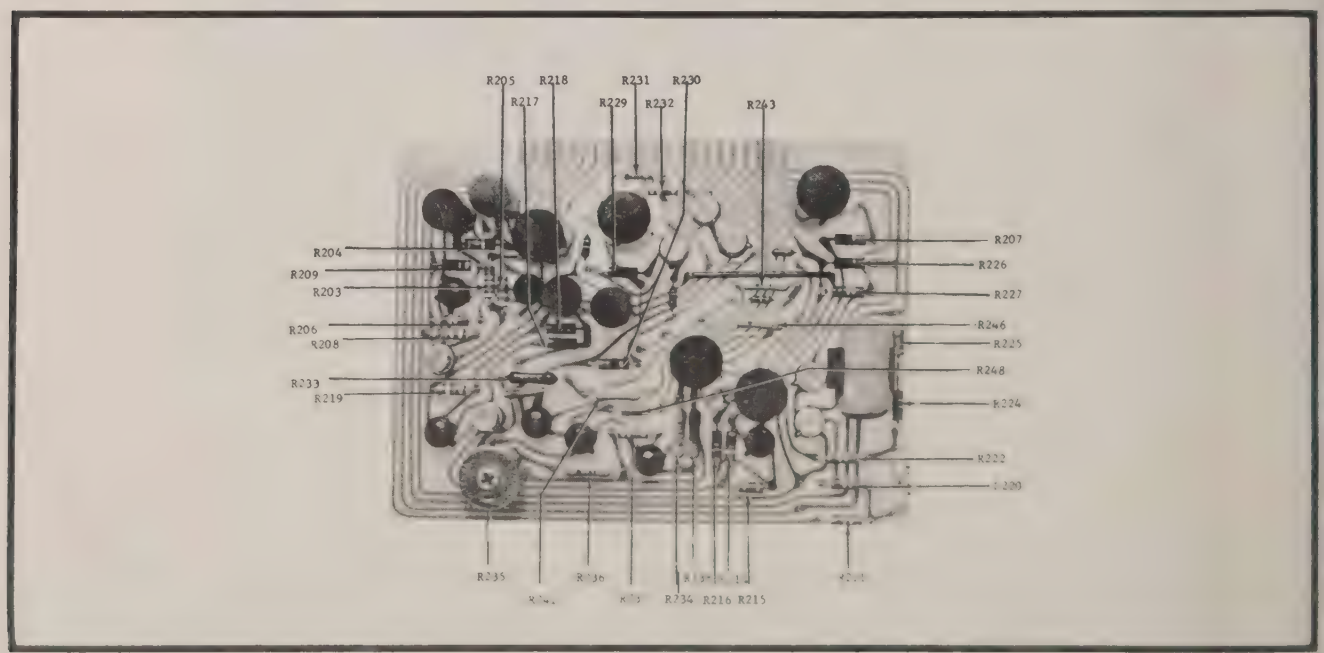

FIGURE 13. Resistor Locations on PC-121. Refer to Figure 12 for capacitor, diode and transistor locations.

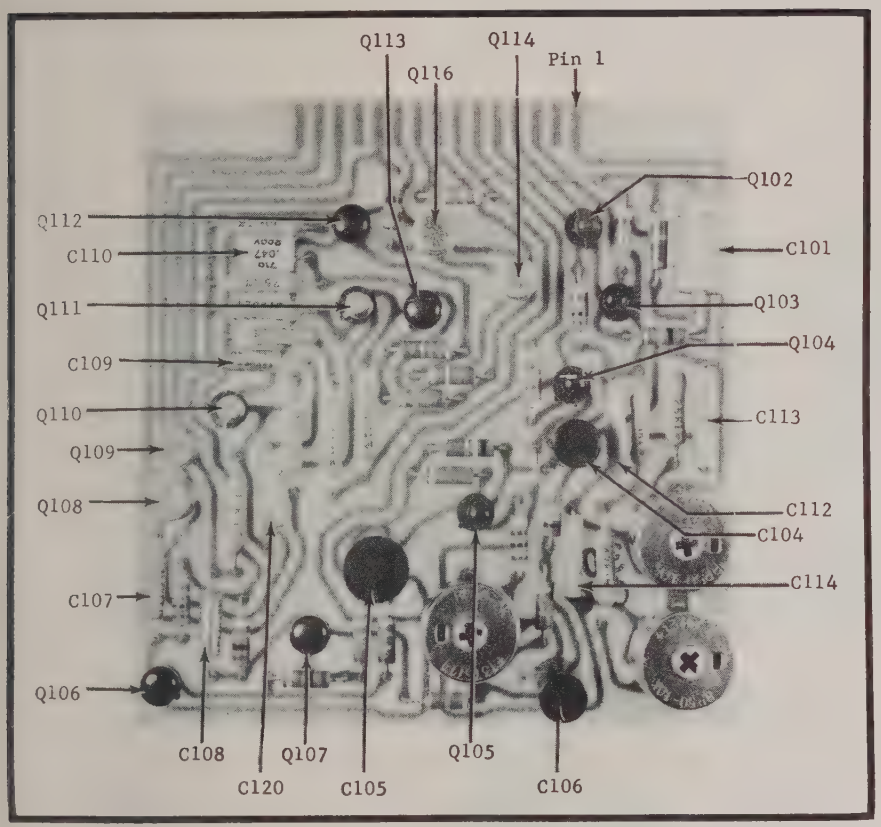

FIGURE 14. Capacitor, Diode and Transistor Locations on PC-155. Refer to Figure 15 for resistor locations and test points M and N.

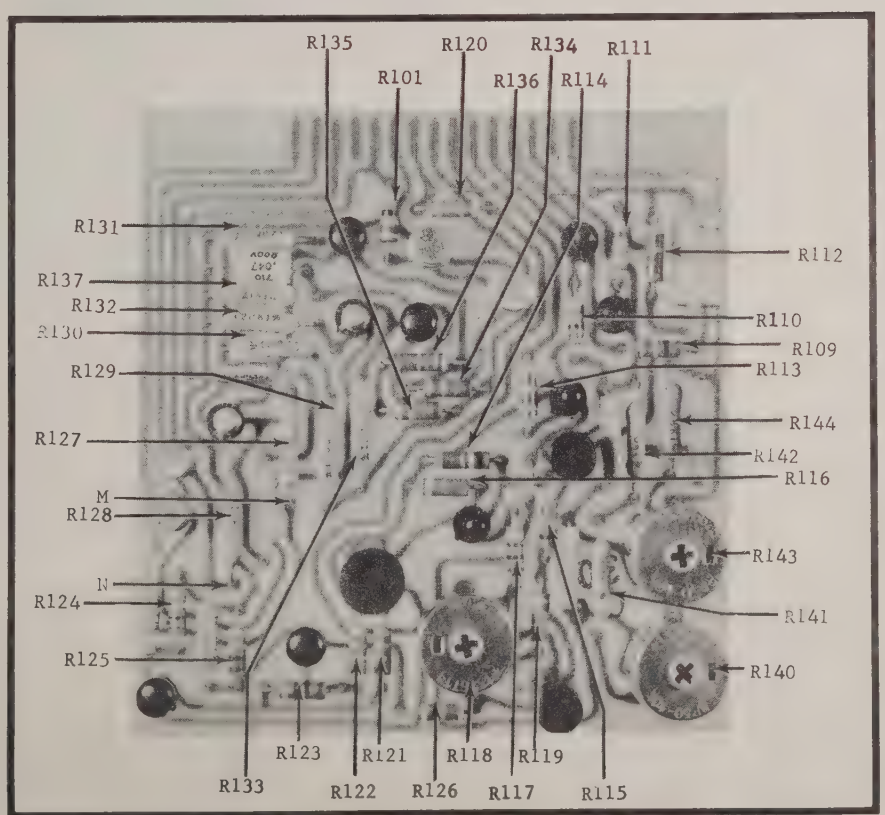

FIGURE 15. Resistor and Test Point Locations on PC-155. Refer to Figure 14 for capacitor, diode and transistor locations.

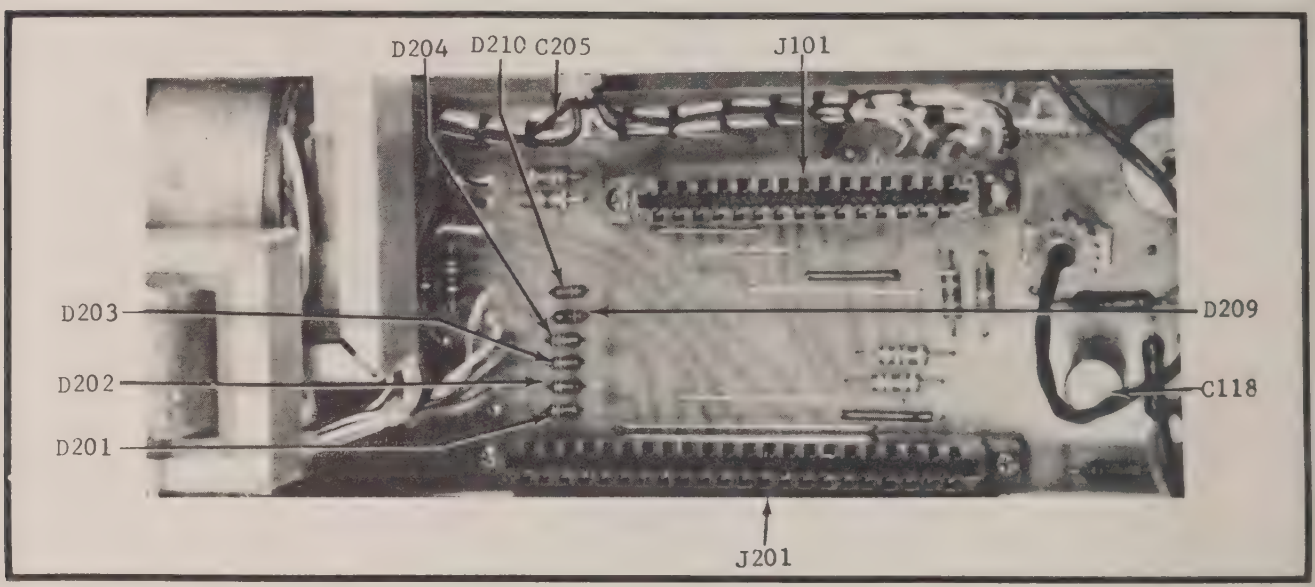

FIGURE 16. Capacitor, Connector and Diode Locations in PC-120. Refer to Figure 17 for resistor locations.

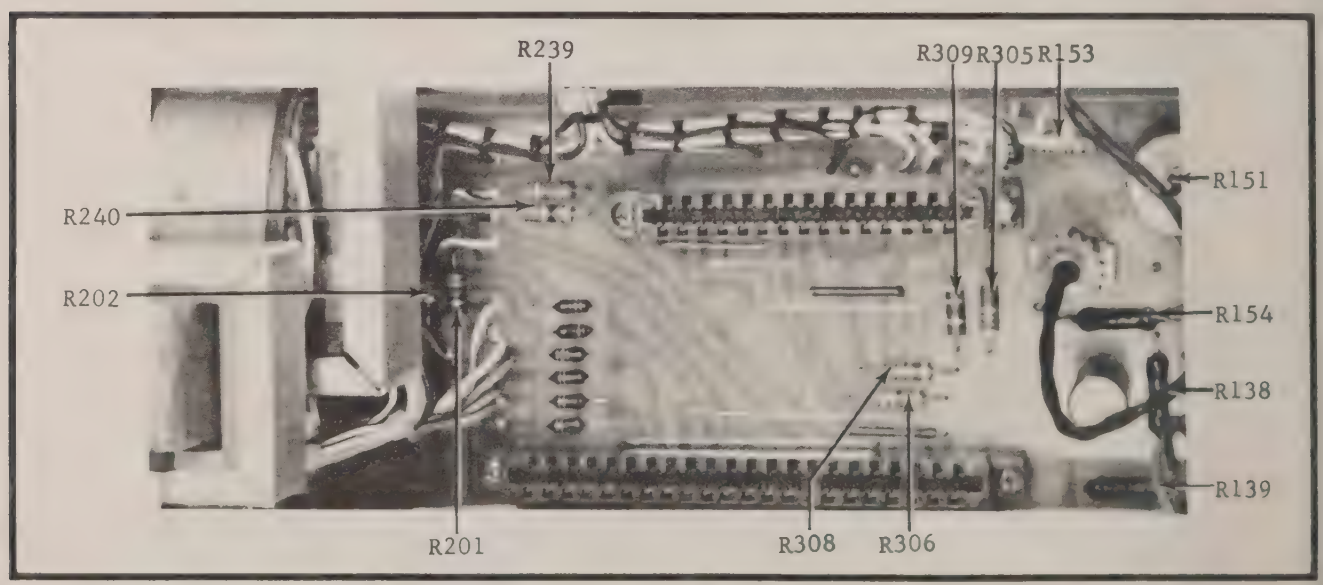

FIGURE 17. Resistor Locations in PC-120. Refer to Figure 16 for capacitor, connector and diode locations.

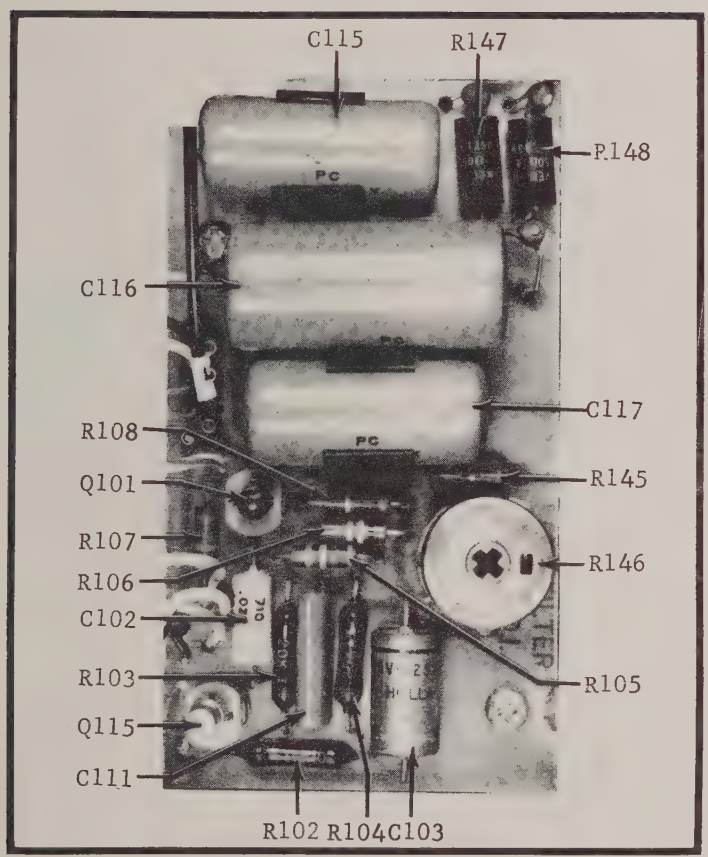

FIGURE 18. Component Locations on PC-154.

SECTION 6. ACCESSORIES

6-1. MODEL 4006 RACK MOUNTING KIT.

a. The Model 4006 Kit converts the Model 150B from a bench model to rack mounting. Rack dimensions are 7 inches high x 19 inches wide x 10 inches deep. The Microvolt Ammeter converts to half-rack size, and the Kit contains a half-rack adapter panel.

b. Procedures. Remove the wrap-around cover on the Model 150B by removing the two corner screws at the bottom of each side. Add the rack mounting parts as shown in Figure 19. Attach in this order: cover (2), rack angle (5), panel support angle (7), rack panel adapter (8), and chassis connecting plate (3).

c. Notice that the cover assembly comes in two sizes, a 13-inch size and a 10-inch size. Use the 10 inch size with the Model 150B. Use the 13-inch size for 13-inch deep Keithley instruments. The rest of the procedure for the 13-inch size is the same as given above for the 10-inch cover.

6-2. .MODEL 4007 DUAL RACK MOUNTING KIT.

a. The Model 4007 Kit converts the Model 150B to rack mounting. The Kit will contain two Model 150Bs. Dimensions of the Kit are 7 inches high x 19 inches wide x 10 inches deep.

b. Procedures. Remove the wrap-around cover on each instrument by removing the two corner screws at the bottom of each side. Assemble the rack mounting parts as shown in Figure 20. Attach as follows when rack adapting two instruments: cover (1), two rack angles (4), chassis connecting plate (6), and chassis connecting plate (2).

TABLE 13.
Parts List for Keithley Model 4006 Rack Mounting Kit.

Item (Fig. 19)	Description	Keithley Part No.	Qty.
1	Cover Assembly (13 inch)	20015B	1
2	Cover Assembly (10 inch)	20016B	1
3	Chassis Connecting Plate	19154A	1
4	Screw, round head, hex socket, #10 x 1/2	---	4
5	Rack Angle	19147B	1
6	Screw, slotted, #10 x 1/2	---	4
7	Panel Support Angle	19157A	1
8	Rack Adapter Panel	19158A	1

6-3. MODEL 370 RECORDER.

a. The Model 370 Recorder is uniquely compatible with the Model 150B as well as other Keithley micro-

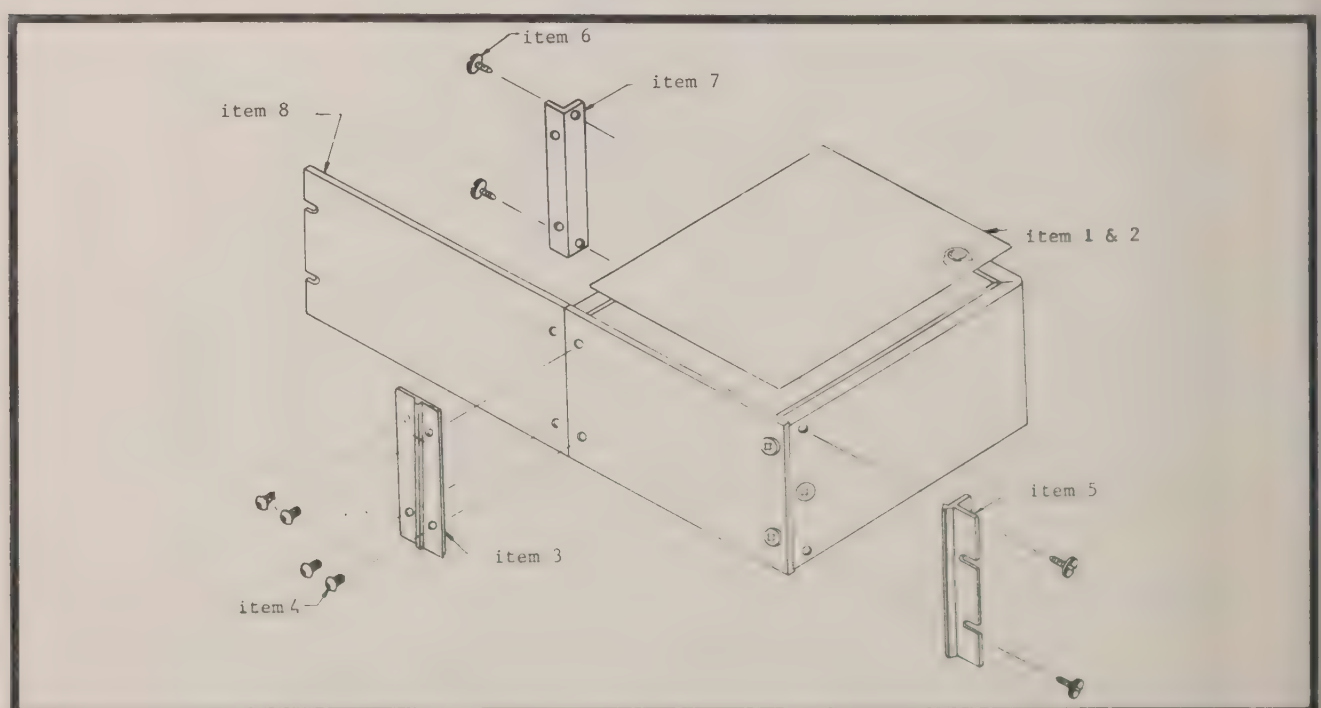

FIGURE 19. Exploded View of Keithley Model 4006 Rack Mounting Kit. Refer to Table 13 for parts list.

TABLE 14.
Parts List for Keithley Model 4007 Dual Rack Mounting Kit.

Item (Fig. 20)	Description	Keithley Part No.	Qty.
1	Cover (10 inch)	19152B	2
2	Chassis Connecting Plate	19154A	1
3	Screw, round head, hex socket, #10 x 1/2	---	8
4	Rack Angle	19147B	2
5	Screw, slotted, #10 x 1/2	---	4
6	Chassis Connecting Plate	19700A	1

voltmeters, electrometers and picoammeters. The Recorder is a high quality, economical instrument that epitomizes the performance of the Model 150B, and any other Keithley instrument, even in the most critical applications. The Model 370 can be used with the Model 150B to record dc potentials and currents over the Model 150B's entire range.

b. The Model 150B has the output necessary to drive the Recorder directly (1 volt, 1 milliampere), thus eliminating the need for a pre-amplifier. The Model 370 floats ±500 volts off ground, enabling the Model 150B to be used to its specified off-ground voltage. The Recorder is specially shielded to avoid pickup of extraneous signals. The response time of the Model 370 Recorder is 0.5 second; linearity is ±1% of full scale. Ten chart speeds — from 3/4 inch per hour to 12 inches per minute — are selectable with front panel controls. The 6-inch chart has a rectilinear presentation. The Model 370 Recorder has a self-priming inking system. Chart paper and ink refills are easy to install.

c. The Model 370 is very easy to use with the Model 150B. Just connect the Model 150B's 1V OUTPUT Receptacle to the Model 370 with the furnished 3701 Input Cable and adjust an easily accessible control for full-scale recorder deflection. On the most sensitive ranges of the Model 150B, under some conditions, an 8 Hz beat may appear. This condition can be eliminated by mounting a one microfarad capacitor across pins 14 and 17 in the back of the Model 370 Recorder. Or, to eliminate this condition just use the Model 399 isolating amplifier.

6-4. MODEL 399 ISOLATING AMPLIFIER.

a. The Model 399 Isolating Amplifier is a unity-gain amplifier that is designed to extend the capabilities of the Model 150B and other instruments to make off-ground measurements much more convenient. The unit can be grounded or floated up to 1500 volts off ground while the output is grounded or floated up to 100 volts off ground. This FIFO (floating input, floating output) capability permits floating a measuring instrument up to 1500 volts off ground and have it connected through the Model 399 to a grounded recorder. Total system accuracy is maintained, since the Model

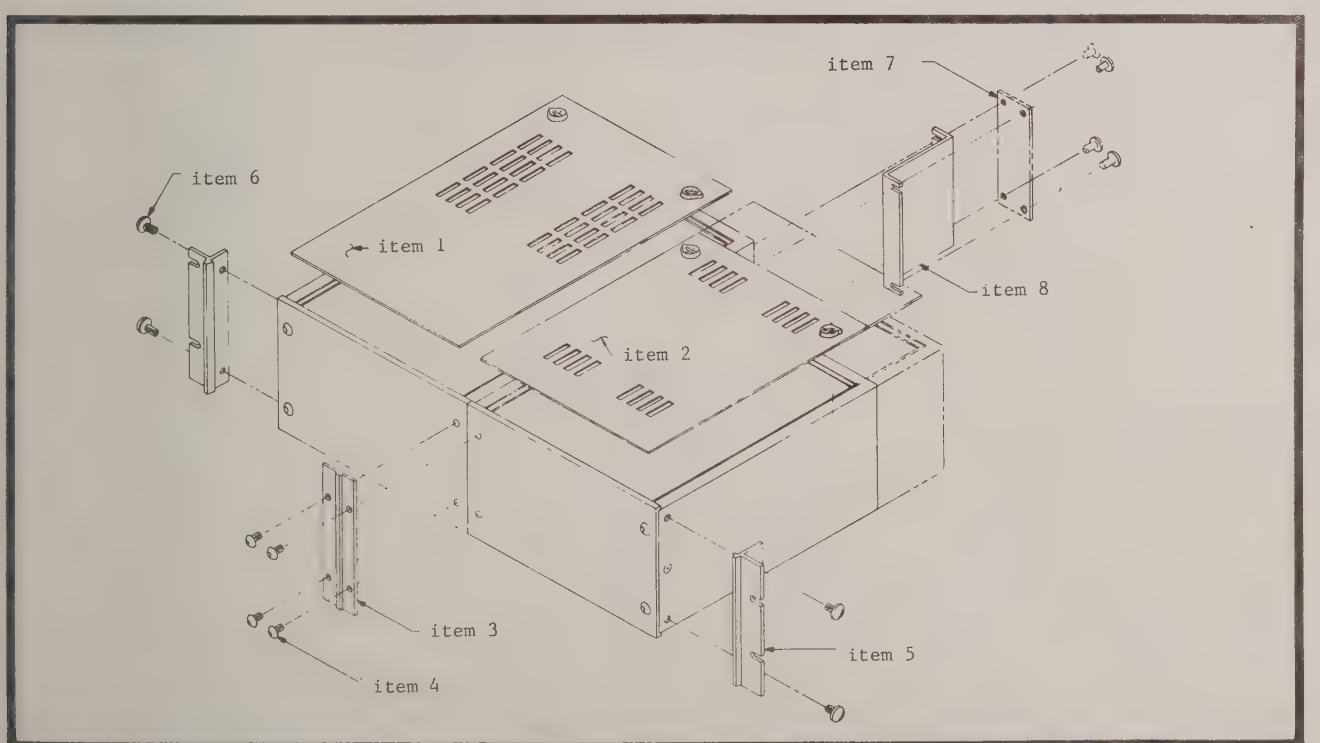

FIGURE 20. Exploded View of Keithley Model 4007 Dual Rack Mounting Kit. Refer to Table 14 for parts list.

399 will affect accuracy less than 1% under even adverse conditions.

b. An ideal application for the Model 399 is to use it as the interface between the Model 150B which is floating up to 400 volts and a grounded recorder. Off-ground measurements to 10^{-7} volt and 10^{-10} ampere are possible with relative ease using this system.

c. Other uses can take advantage of the Model 399's isolation to break ground loops within a system. Input isolation is greater than 10^{12} ohms shunted by 100 picofarads. Output isolation is greater than 10^{8} ohms shunted by 0.001 microfarad.

d. Also, the Model 150B 8 Hz beat may be attenuated by a factor of 10 using the Model 399 in the slow mode.

e. The Model 399 is fully compatible and easy to use with the Model 150B. The Model 3991 Input cable, supplied with the Model 399, is specially designed for connection of the two instruments.

f. The Model 399 is also fully compatible with other floating Keithley electrometers, picoammeters, null detectors, microvoltmeters and nanovoltmeters.

SECTION 7. REPLACEABLE PARTS

7-1. REPLACEABLE PARTS LIST. The Replaceable Parts List describes the components of the Model 150B (and its accessories). The List gives the circuit designation, the part description, a suggested manufacturer, the manufacturer's part number and the Keithley Part Number. The last column indicates the figure picturing the part. The name and address of the manufacturers listed in the "Mfg. Code" column are in Table 16.

7-2. HOW TO ORDER PARTS.

a. For parts orders, include the instrument's model and serial number, the Keithley Part Number, the circuit designation and a description of the part. All structural parts and those parts coded for Keithley manufacture (80164), must be ordered through Keithley Instruments, Inc. or its representatives. In ordering a part not listed in the Replaceable Parts List, completely describe the part, its function and its location.

b. Order parts through your nearest Keithley representative or the Sales Service Department, Keithley Instruments, Inc.

TABLE 15.
Abbreviations and Symbols.

A	ampere	k	kilo (10^{3})	p	pico (10^{-12})
CerD	Ceramic, Disc	M or meg	mega (10^{6}) or megohm	Ref.	Reference
Comp	Composition	m	milli (10^{-3})	req'd.	required
		Mfg.	Manufacturer		
DCb	Deposited Carbon	MtF	Metal Film	μ	micro (10^{-6})
		My	Mylar		
EAL	Electrolytic, Aluminum			V	volt
ETB	Electrolytic, tubular	Ω	ohm		
ETT	Electrolytic, tantulum			W	watt
				WW	Wirewound
F	farad			WWVar	Wirewound Variable
Fig	Figure				

MODEL 150B REPLACEABLE PARTS LIST

(Refer to Schematic Diagrams 20986E and 20357D for circuit designations).

CAPACITORS

Circuit Desig.	Value	Rating	Type	Mfg. Code	Mfg. Part No.	Keithley Part No.	Fig. Ref.
C101	125 µF	15V	ETB	73445	C426	C3-125M	14
C102	.022 µF	400V	My	13050	SM1A	C73-.022M	18
C103	125 µF	15V	ETB	73445	C426	C3-125M	18
C104	10 µF	15V	EAL	56289	89D159	C93-10M	14
C105	100 µF	15V	EAL	56289	89D217	C93-100M	14
C106	10 µF	20V	ETT	05397	K10J20K	C80-10M	14
C107	10 µF	15V	EAL	56289	89D159	C93-10M	14
C108	10 µF	20V	ETT	05397	K10J20K	C80-10M	14
C109	*22 µF	10V	ETT	05397	K33J10S	C78-22M	14
C110	.047 µF	200V	My	13050	SM1A	C143-.047M	14
C111	.068 µF	100V	My	88480	3FR 683-1E	C66-.068M	18
C112	.033 µF	100V	My	88480	3FR 333-1E	C146-.033M	14
C113	.068 µF	100V	My	88480	3FR 683-1E	C146-.068M	14
C114	.033 µF	100V	My	88480	3FR 333-1E	C146-.033M	14
C115	2.5 µF	200V	My	99120	AZ2-255X	C145-2.5M	18
C116	5 µF	200V	My	99120	AZ2-505X	C145-5M	18
C117	2.5 µF	200V	My	99120	AZ2-255X	C145-2.5M	18
C118	100 µF	6V	EAL	56289	89D	C147-100M	16
C119	100 µF	15V	ETB	72699	TD100-15	C11-100M	10
C120	*27 µF	10V	ETT	80164		C78-27M	14
C121	.0033 µF	600V	CerD	72982	ED-.0033	C22-.0033M	11
C201	500 µF	25V	EAL	56289	89D231	C94-500M	12
C202	500 µF	25V	EAL	56289	89D231	C94-500M	12
C203	100 µF	25V	EAL	56289	89D226	C94-100M	12
C204	100 µF	25V	EAL	56289	89D226	C94-100M	12
C205	0.1 µF	200V	My	02777	P-12M	C66-.1M	16
C206	Not used						
C207	500 µF	25V	EAL	56289	89D31	C94-500M	12
C208	100 µF	25V	EAL	56289	89D226	C94-100M	12
C209	100 µF	25V	EAL	56289	89D226	C94-100M	12
C210	0.1 µF	200V	My	13050	SM1A	C47-.1M	12
C211	500 µF	25V	EAL	56289	89D231	C94-500M	12
C212	500 µF	25V	EAL	56289	89D231	C94-500M	12
C213	2 µF	200V	My	99120	AZ2-205X	C120-2M	12
C214	.0033 µF	600V	CerD	72982	ED-.0033	C22-.0033M	12

DIODES

Circuit Desig.	Type	Number	Mfg. Code	Keithley Part No.	Fig. Ref.
D201	Silicon	1N645	01295	RF-14	16
D202	Silicon	1N645	01295	RF-14	16
D203	Silicon	1N645	01295	RF-14	16
D204	Silicon	1N645	01295	RF-14	16
D205	Silicon	1N645	01295	RF-14	12
D206	Silicon	1N645	01295	RF-14	12
D207	Silicon	1N645	01295	RF-14	10
D208	Silicon	1N645	01295	RF-14	10
D209	Silicon	1N645	01295	RF-14	16
D210	Silicon	1N645	01295	RF-14	16

*Nominal value, factory adjusted.

DIODES (Cont'd.)

Circuit Desig.	Type	Number	Mfg. Code	Keithley Part No.	Fig. Ref.
D211	Zener	1N709	12954	DZ-21	12
D212	Zener	1N709	12954	DZ-21	12

MISCELLANEOUS PARTS

Circuit Desig.	Description	Mfg. Code	Keithley Part No.	Fig. Ref.
BT201	Battery Assembly	80164	Model 1489	10
F201(117V)	Fuse, 3/4 A, 3AG (Mfg. No. 313.750)	75915	FU-14	2
F202(117V)	Fuse, slow blow, 1/4 A, 3AG (Mfg. No. 313.250)	75915	FU-17	2
F202(234V	Fuse, slow blow, 1/8 A, 3AG (Mfg. No. 313.125)	75915	FU-20	
---	Fuse holder, 2 req'd. (Mfg. No. 342012)	75915	FH-3	
G101	Chopper Assembly	80164	20138B	10
J101	Connector, 15 pin (Mfg. No. PSC4SS 15-12)	03612	CS-175	16
J102	Receptacle, Microphone, 1V OUTPUT (Mfg. No. 80-PC2F)	02660	CS-32	2
---	(F)Plug, Microphone, Mate of J102 (Mfg. No. 80-MC2M)	02660	CS-33	
J103	Receptacle, Microphone, 100 MV OUTPUT (Mfg. No. 80-PC2F)	02660	CS-32	2
---	(F)Plug, Microphone, Mate of J103 (Mfg. No. 80-MC2M)	02660	CS-33	
J104	Receptacle, INPUT	80164	CS-133	1
---	Plug, Special, Mate of J101	80164	Model 1486	
J105**	Receptacle			11
	• Locking Ring (Mfg. No. 126-1430)	02660	CS-165	
	• Receptacle (Mfg. No. 126-1429)	02660	CS-163	
	• Body (Mfg. No. 126-1425)	02660	CS-161	
J105***	Plug			11
	• Nut (Mfg. No. 41-153)	02660	CS-160	
	• Lock Ring (Mfg. No. 126-1428)	02660	CS-164	
	• Plug (Mfg. No. 126-1427)	02660	CS-162	
J201	Connector, 22 pin (Mfg. No. PSC4SS22-12)	03612	CS-182	16
J202	Banana Jack, 2 req'd. (Mfg. No. 108-903)	74970	BJ-6B	2
---	Binding Post, LO (Mfg. No. DF21BC)	58474	BP-11B	2
---	Binding Post, GND (Mfg. No. DF21GC)	58474	BP-11G	2
---	Shorting Link (Mfg. No. 938-L)	24655	BP-6	2
M101	Meter	80164	ME-14	10
P201	Cord Set, 6 feet (Mfg. No. 4638-13)	93656	CO-5	2
---	Cable Clamp (Mfg. No. SR-5P-1)	28520	CC-4	
S101	Slide Switch, FILTER	80164	SW-45	1
S102	Rotary Switch less components, FUNCTION	80164	SW-214	11,1
---	Rotary Switch with components, Function	80164	20147B	
---	Knob Assembly, Function Switch	80164	14838A	

(F) Furnished accessory.
** Schematic Diagram 20986E
*** Schematic Diagram 20357D

MISCELLANEOUS PARTS (Cont'd.)

Circuit Desig.	Description	Mfg. Code	Keithley Part No.	Fig. Ref.
S103	Rotary Switch less components, ZERO SUPPRESS COARSE	80164	SW-219	10,1
---	Rotary Switch with components, Zero Suppress Coarse	80164	20135B	
---	Knob Assembly, Zero Suppress Coarse Switch	80164	20382A	
---	Rotary Switch, Potentiometer, ZERO SUPPRESS FINE	80164	RP42-10K	1,10
---	Knob Assembly, Zero Suppress Fine Switch	80164	16995A	
S104	Rotary Switch less components, RANGE	80164	SW-215	11,1
---	Rotary Switch with components, Range	80164	20145B	
---	Dial Assembly, Range Switch	80164	19713A	
S201	Rotary Switch less components, POWER SUPPLY	80164	SW-218	10,1
---	Rotary Switch with components, Power Supply	80164	20133B	
---	Knob Assembly, Power Supply Switch	80164	18393A	
S202	Not used			
S203	Slide Switch, 117-234V	80164	SW-151	2
T101	Transformer Assembly	80164	20137B	10
T201	Transformer	80164	TR-93	10
T202	Transformer	80164	TR-95	10

RESISTORS

Circuit Desig.	Value	Rating	Type	Mfg. Code	Mfg. Part No.	Keithley Part No.	Fig. Ref.
R101	47 Ω	10%, 1/2 W	Comp	01121	EB	R1-47	15
R102	100 Ω	1%, 1/2 W	MtF	07716	CEC	R94-100	18
R103	20 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-20K	18
R104	8.25 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-8.25K	18
R105	820 kΩ	10%, 1/2 W	Comp	01121	EB	R1-820K	18
R106	100 kΩ	10%, 1/2 W	Comp	01121	EB	R1-100K	18
R107	82 kΩ	10%, 1/2 W	Comp	01121	EB	R1-82K	18
R108	8.2 kΩ	10%, 1/2 W	Comp	01121	EB	R1-8.2K	18
R109	10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	15
R110	10 kΩ	10%, 1/4 W	Comp	01121	CB	R76-10K	15
R111	820 Ω	10%, 1/2 W	Comp	01121	EB	R1-820	15
R112	8.2 kΩ	10%, 1/2 W	Comp	01121	EB	R1-8.2K	15
R113	6.8 kΩ	10%, 1/2 W	Comp	01121	EB	R1-6.8K	15
R114	100 kΩ	10%, 1/2 W	Comp	01121	EB	R1-100K	15
R115	100 kΩ	10%, 1/2 W	Comp	01121	EB	R1-100K	15
R116	2.2 kΩ	10%, 1/2 W	Comp	01121	EB	R1-2.2K	15
R117	100 Ω	10%, 1/2 W	Comp	01121	EB	R1-100	15
R118	2 kΩ	20%, 2 W	WW	71450	1NS115	RP50-2K	15
R119	1.8 kΩ	10%, 1/2 W	Comp	01121	EB	R1-1.8K	15
R120	4.7 kΩ	10%, 1/2 W	Comp	01121	EB	R1-4.7K	15
R121	18 kΩ	10%, 1/2 W	Comp	01121	EB	R1-18K	15
R122	18 kΩ	10%, 1/2 W	Comp	01121	EB	R1-18K	15
R123	100 Ω	10%, 1/2 W	Comp	01121	EB	R1-100	15
R124	10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	15
R125	10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	15
R126	4.7 kΩ	10%, 1/2 W	Comp	01121	EB	R1-4.7K	15
R127	10 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-10K	15
R128	10 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-10K	15
R129	49.9 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-49.9K	15
R130	249 Ω	1%, 1/2 W	DCb	79727	CFE-15	R12-249	15

RESISTORS (Cont'd.)

Circuit Desig.	Value	Rating	Type	Mfg. Code	Mfg. Part No.	Keithley Part No.	Fig. Ref.
R131	121 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-121K	15
R132	121 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-121K	15
R133	49.9 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-49.9K	15
R134	12 kΩ	10%, 1/2 W	Comp	01121	EB	R1-12K	15
R135	12 kΩ	10%, 1/2 W	Comp	01121	EB	R1-12K	15
R136	470 Ω	10%, 1/2 W	Comp	01121	EB	R1-470	15
R137	24.9 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-24.9K	15
R138	3.33 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-3.33K	17
R139	1 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-1K	17
R140	10 kΩ	20%, 2 W	WW	71450	1NS-115	RP50-10K	15
R141	*46.4 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-46.4K	15
R142	49.9 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-49.9K	15
R143	10 kΩ	20%, 2 W	WW	71450	1NS 115	RP50-10K	15
R144	20 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-20K	15
R145	*560 Ω	10%, 1/4 W	Comp	01121	CB	R76-560	18
R146	10 kΩ	20%, 2 W	WW	71450	1NS 115	RP50-10K	18
R147	**1060 Ω	1/4%, 1/3 W	WW	01686	7010	R132-1060	18
R148	**1060 Ω	1/4%, 1/3 W	WW	01686	7010	R132-1060	18
R149	301 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-301K	10
R150	*220 Ω	10%, 1/4 W	Comp	01121	CB	R76-220	
R151	2 kΩ	20%, 2 W	WW	71450	1NS115	RP50-2K	17
R152	100 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-100K	10
R153	8.66 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-8.66K	17
R154	4.99 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-4.99K	17
R155	1 kΩ	10%, 5 W	WWVar	71450	AW	RP34-1K	11,2
R156	*8.2 MΩ	10%, 1/2 W	Comp	01121	EB	R1-8.2M	11
R157	*2.7 MΩ	10%, 1/2 W	Comp	01121	EB	R1-2.7M	11
R158	*1.8 kΩ	10%, 1/2 W	Comp	01121	EB	R1-1.8K	11
R159	*680 Ω	10%, 1/2 W	Comp	01121	EB	R1-680	11
R160	*220 Ω	10%, 1/2 W	Comp	01121	EB	R1-220	11
R161	*68 Ω	10%, 1/2 W	Comp	01121	EB	R1-68	11
R162	*100 Ω	10%, 1/2 W	Comp	01121	EB	R1-100	11
R163	68 Ω	10%, 1/2 W	Comp	01121	EB	R1-68	11
R164	300 kΩ	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-300K	11
R165	300 Ω	1/4%, 1/3 W	WW	01686	7010	R132-300	11
R166	1 MΩ	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-1M	11
R167	300.6 Ω	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-300.6	11
R168	300 kΩ	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-300K	11
R169	99.7 kΩ	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-99.7K	11
R170	29.7 kΩ	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-29.7K	11
R171	9.7 kΩ	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-9.7K	11
R172	2.7 kΩ	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-2.7K	11
R173	700 Ω	1/4%, 1/2 W	MtF	07716	CEC-TO	R127-700	11
R174	333 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-333K	11
R175	100 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-100K	11
R176	33.3 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-33.3K	11
R177	10 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-10K	11
R178	3.33 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-3.33K	11
R179	1 kΩ	1%, 1/2 W	MtF	07716	CEC	R94-1K	11
R180	333 Ω	1%, 1/2 W	MtF	07716	CEC	R94-333	11

* Nominal value, factory set.

** Keithley part number R132-1273 is used for R147 and R148 in units adjusted for 50 Hz.

RESISTORS (Cont'd.)

Circuit Desig.	Value	Rating	Type	Mfg. Code	Mfg. Part No.	Keithley Part No.	Fig. Ref.
R181	100 Ω	1%, 1/2 W	MtF	07716	CEC	R94-100	11
R182	33.3 Ω	1%, 1/2 W	MtF	07716	CEC	R94-33.3	11
R183	10 Ω	1%, 1/2 W		00327	A20	R126-10	11
R184	3.33 Ω	1%, 1/2 W		00327	A20	R126-3.33	11
R185	1 Ω	0-2%, 1/2 W		00327	A20	R128-1	11
R186	100 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-100K	11
R187	3.01 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-3.01K	10
R188	*10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	11
R189	*2.2 kΩ	10%, 1/2 W	Comp	01121	EB	R1-2.2K	11
R190	*1 kΩ	10%, 1/2 W	Comp	01121	EB	R1-1K	11
R201	330 Ω	10%, 1/2 W	Comp	01121	EB	R1-330	17
R202	330 Ω	10%, 1/2 W	Comp	01121	EB	R1-330	17
R203	4.7 Ω	10%, 1/2 W	Comp	01121	EB	R1-4.7	13
R204	*10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	13
R205	470 Ω	10%, 1/2 W	Comp	01121	EB	R1-470	13
R206	10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	13
R207	100 Ω	10%, 1/2 W	Comp	01121	EB	R1-100	13
R208	12 kΩ	10%, 1/2 W	Comp	01121	EB	R1-12K	13
R209	100 kΩ	10%, 1/2 W	Comp	01121	EB	R1-100K	13
R210	Not used						
R211, R212, R213		Not used					
R214	27 Ω	10%, 1/2 W	Comp	01121	EB	R1-27	13
R215	470 Ω	10%, 1/2 W	Comp	01121	EB	R1-470	13
R216	10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	13
R217	12 kΩ	10%, 1/2 W	Comp	01121	EB	R1-12K	13
R218	100 kΩ	10%, 1/2 W	Comp	01121	EB	R1-100K	13
R219	*10 kΩ	10%, 1/2 W	Comp	01121	EB	R1-10K	13
R220	15 kΩ	10%, 1/2 W	Comp	01121	EB	R1-15K	13
R221	15 kΩ	10%, 1/2 W	Comp	01121	EB	R1-15K	13
R222	15 kΩ	10%, 1/2 W	Comp	01121	EB	R1-15K	13
R223	Not used						
R224	15 kΩ	10%, 1/2 W	Comp	01121	EB	R1-15K	13
R225	820 Ω	10%, 1/2 W	Comp	01121	EB	R1-820	13
R226	22 kΩ	10%, 1/2 W	Comp	01121	EB	R1-22K	13
R227	22 kΩ	10%, 1/2 W	Comp	01121	EB	R1-22K	13
R228	56 Ω	5%, 10 W	WW	94310	Val-10	R133-56	10
R229	2.7 kΩ	10%, 1/2 W	Comp	01121	EB	R1-2.7K	13
R230	2.7 kΩ	10%, 1/2 W	Comp	01121	EB	R1-2.7K	13
R231	1.8 kΩ	10%, 1/2 W	Comp	01121	EB	R1-1.8K	13
R232	390 Ω	10%, 1/2 W	Comp	01121	EB	R1-390	13
R233	2.74 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-2.74K	13
R234	30.1 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-30.1K	13
R235	1 kΩ	20%, 2 W	WW	71450	1NS-115	RP50-1K	13
R236	1.4 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-1.4K	13
R237	3.3 kΩ	10%, 1/2 W	Comp	01121	EB	R1-3.3K	13
R238	20 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-20K	13
R239	680 Ω	10%, 1/2 W	Comp	01121	EB	R1-680	17
R240	47 Ω	10%, 1/2 W	Comp	01121	EB	R1-47	17
R241	Not used						
R242	1.82 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-1.82K	13
R243	1 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-1K	13

* Nominal value, factory set.

RESISTORS (Cont'd.)

Circuit Desig.	Value	Rating	Type	Mfg. Code	Mfg. Part No.	Keithley Part No.	Fig. Ref.
R244	Not used						
R245	Not used						
R246	604 Ω	1%, 1/2 W	DCb	79727	CFE-15	R12-604	13
R247	Not used						
R248	2.2 kΩ	10%, 1/2 W	Comp	01121	EB	R1-2.2K	13
R301	10 MΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-10M	10
R302	301 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-301K	10
R303	27.4 kΩ	1%, 1/2 W	DCb	79727	CFE-15	R12-27.4K	10
R304	10 kΩ	10%, 5 W	WWVar	71450	AW	RP34-10K	10
R305	47 kΩ	10%, 1/2 W	Comp	01121	EB	R1-47K	17
R306	*470 Ω	10%, 1/2 W	Comp	01121	EB	R1-470	17
R307	10 kΩ	5%, 2 W	WWVar	12697	62JA	RP42-10K	10,1
R308	*470 Ω	10%, 1/2 W	Comp	01121	EB	R1-470	17
R309	47 kΩ	10%, 1/2 W	Comp	01121	EB	R1-47K	17
R310	10^9 Ω	20%, 1/2 W	Comp	75042	GBT	R37-10^9	11

TRANSISTORS

Circuit Desig.	Number	Mfg. Code	Keithley Part No.	Fig. Ref.
Q101	2N3565	07263	TG-39	18
Q102	2N3565	07263	TG-39	14
Q103	2N3565	07263	TG-39	14
Q104	2N3565	07263	TG-39	14
Q105	2N3565	07263	TG-39	14
Q106	S17638	07263	TG-33	14
Q107	S17638	07263	TG-33	14
Q108	2N1381	01295	TG-8	14
Q109	2N1381	01295	TG-8	14
Q110**	A1380	80164	18548A	14
Q111**	A1380	80164	18548A	14
Q112	S17638	07263	TG-33	14
Q113	S17638	07263	TG-33	14
Q114	2N1605	93332	TG-22	14
Q115	2N5103	73445	TG-55	18
Q116	2N1381	01295	TG-8	14
Q201	2N1535	04713	TG-7	10
Q202	2N1535	04713	TG-7	10
Q203	2N1381	01295	TG-8	12
Q204	S17638	07263	TG-33	12
Q205	S17638	07263	TG-33	12
Q206	S17638	07263	TG-33	12
Q207	2N1381	01295	TG-8	12
Q208	S17638	07263	TG-33	12
Q209	2N398A	02735	TG-13	12
Q210	2N398A	02735	TG-13	12
Q211	Not used			
Q212	2N1381	01295	TG-8	12
Q213	2N1381	01295	TG-8	12

* Nominal value, factory set.

** Transistors Q110 and Q111 are matched for offset. Order only as a pair from Keithley, part number 18548A.

TRANSISTORS (Cont'd.)

Circuit Desig.	Number	Mfg. Code	Keithley Part No.	Fig. Ref.
Q214	2N1381	01295	TG-8	12
Q215	S17638	07263	TG-33	12
Q216	S17638	07263	TG-33	12
Q217	S17638	07263	TG-33	12
Q218	2N1535	04713	TG-7	10

MODELS 1483, 1484 REPLACEABLE PARTS LIST

Description	Quantity	Mfg. Code	Keithley Part No.	Used on Kit Model
Crimp Tool for Copper Lugs	1	80164	TL-1	1483
#8 Nylon Screws	50	80164	---	1483, 1484
#8 Nylon Hex Nuts	50	80164	---	1483, 1484
Copper Bolt-on Lugs	100	80164	17340A	1483, 1484
Copper Spade Lugs	100	80164	17339A	1483, 1484
Copper Hook Lugs	100	80164	17336A	1483, 1484
Copper Splice Tubes	100	80164	17338A	1483, 1484
Low-Thermal Cadmium-Tin Solder	10 feet	80164	---	1483, 1484
Copper Alligator Clips (Mfg. No. 6005)	10	76545	AC-9	1483, 1484
Shielded Cable	10 feet	80164	SC-5	1483, 1484
Insulated #20 Copper Wire	100 feet	80164	WS-1	1483, 1484
Non-metalic Abrasive	3 pads	80164	17774A	1483, 1484

TABLE 16.
Code List of Suggested Manufacturers. (Based on Federal Supply Code for Manufacturers, Cataloging Handbook H4-1).

00327	Welwyn International, Inc. Cleveland, Ohio	07263	Fairchild Camera & Instrument Corp. Semiconductor Div. Mountain View, Calif.	72982	Erie Technological Prods., Inc. Erie, Pa.
01121	Allen Bradley Corp. Milwaukee, Wis.	07716	International Resistance Co. Burlington, Iowa	73445	Amperex Electronic Co., Div. of North American Philips Co.,Inc. Hicksville, N.Y.
01295	Texas Instruments, Inc. Semiconductor-Components Div. Dallas, Texas	12697	Clarostat Mfg. Co., Inc. Cover, N.H.	74970	Johnson, E. F., Co. Waseca, Minn.
01686	RCL Electronics, Inc. Riverside, N.J.	12954	Dickson Electronics Corp. Scottsdale, Ariz.	75042	International Resistance Co. Philadelphia, Pa.
02660	Amphenol-Borg Elec. Corp. Broadview, Chicago, Ill.	13050	Potter Co. Wesson, Miss.	75915	Littlefuse, Inc. Des Plaines, Ill.
02735	Radio Corp. of America Commercial Receiving Tube & Semiconductor Division Somerville, N.J.	24655	General Radio Co. West Concord, Mass.	79727	Continental-Wirt Elec. Corp. Philadelphia, Pa.
02777	Hopkins Engineering Co. San Fernando, Calif.	28520	Heyman Mfg. Co. Kenilworth, N.J.	80164	Keithley Instruments, Inc. Cleveland, Ohio
03612	Burndy Corp. Lynwood, Calif.	56289	Sprague Electric Co. North Adams, Mass.	88480	Mid-West Abrasive Co. Detroit, Mich.
04713	Motorola, Inc. Semiconductor Products Div. Phoenix, Arizona	58474	Superior Electric Co., The Bristol, Conn.	93656	Electric Cord Co. Caldwell, N.J.
05397	Union Carbide Corp. Linde Div., Kemet Dept. Cleveland, Ohio	71450	CTS Corp. Elkhart, Indiana	94310	Tru-Ohm Products Memcor Component Div. Huntington, Ind.
		72699	General Instrument Corp. Newark, N.J.	99120	Plastic Capacitors, Inc. Chicago, Ill.

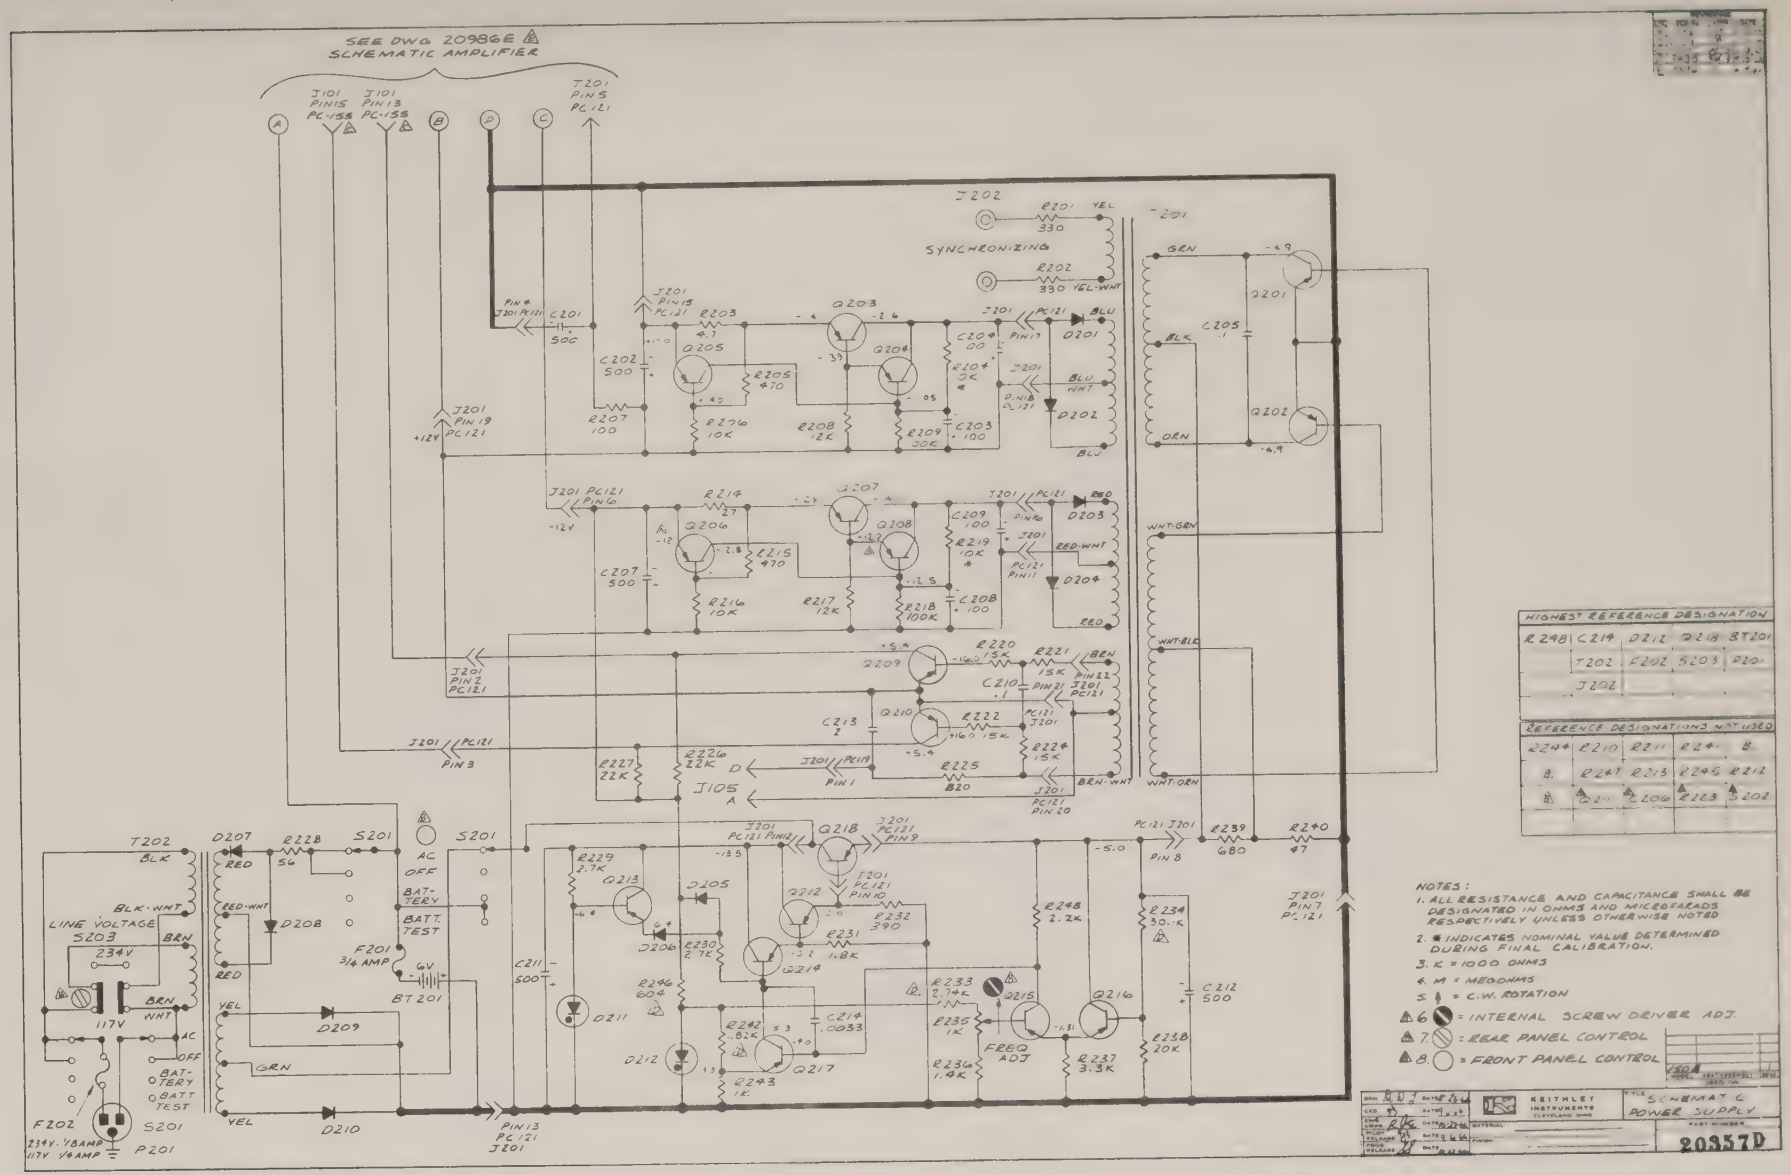

HIGHEST REFERENCE DESIGNATION				
R 248	C 214	D 212	R 218	BT 201
	T 202	F 202	S 203	D 201
	J 202			

REFERENCE DESIGNATIONS NOT USED				
R 244	R 210	R 211	R 241	B
B	R 247	R 213	R 245	R 212
B	⚠ D 211	C 206	R 223	S 202

NOTES:
1. ALL RESISTANCE AND CAPACITANCE SHALL BE DESIGNATED IN OHMS AND MICROFARADS RESPECTIVELY UNLESS OTHERWISE NOTED
2. * INDICATES NOMINAL VALUE DETERMINED DURING FINAL CALIBRATION.
3. K = 1000 OHMS
4. M = MEGOHMS
5. ↺ = C.W. ROTATION
⚠6. = INTERNAL SCREW DRIVER ADJ.
⚠7. = REAR PANEL CONTROL
⚠8. = FRONT PANEL CONTROL

KEITHLEY INSTRUMENTS CLEVELAND, OHIO

TITLE: SCHEMATIC POWER SUPPLY

PART NUMBER 20957D

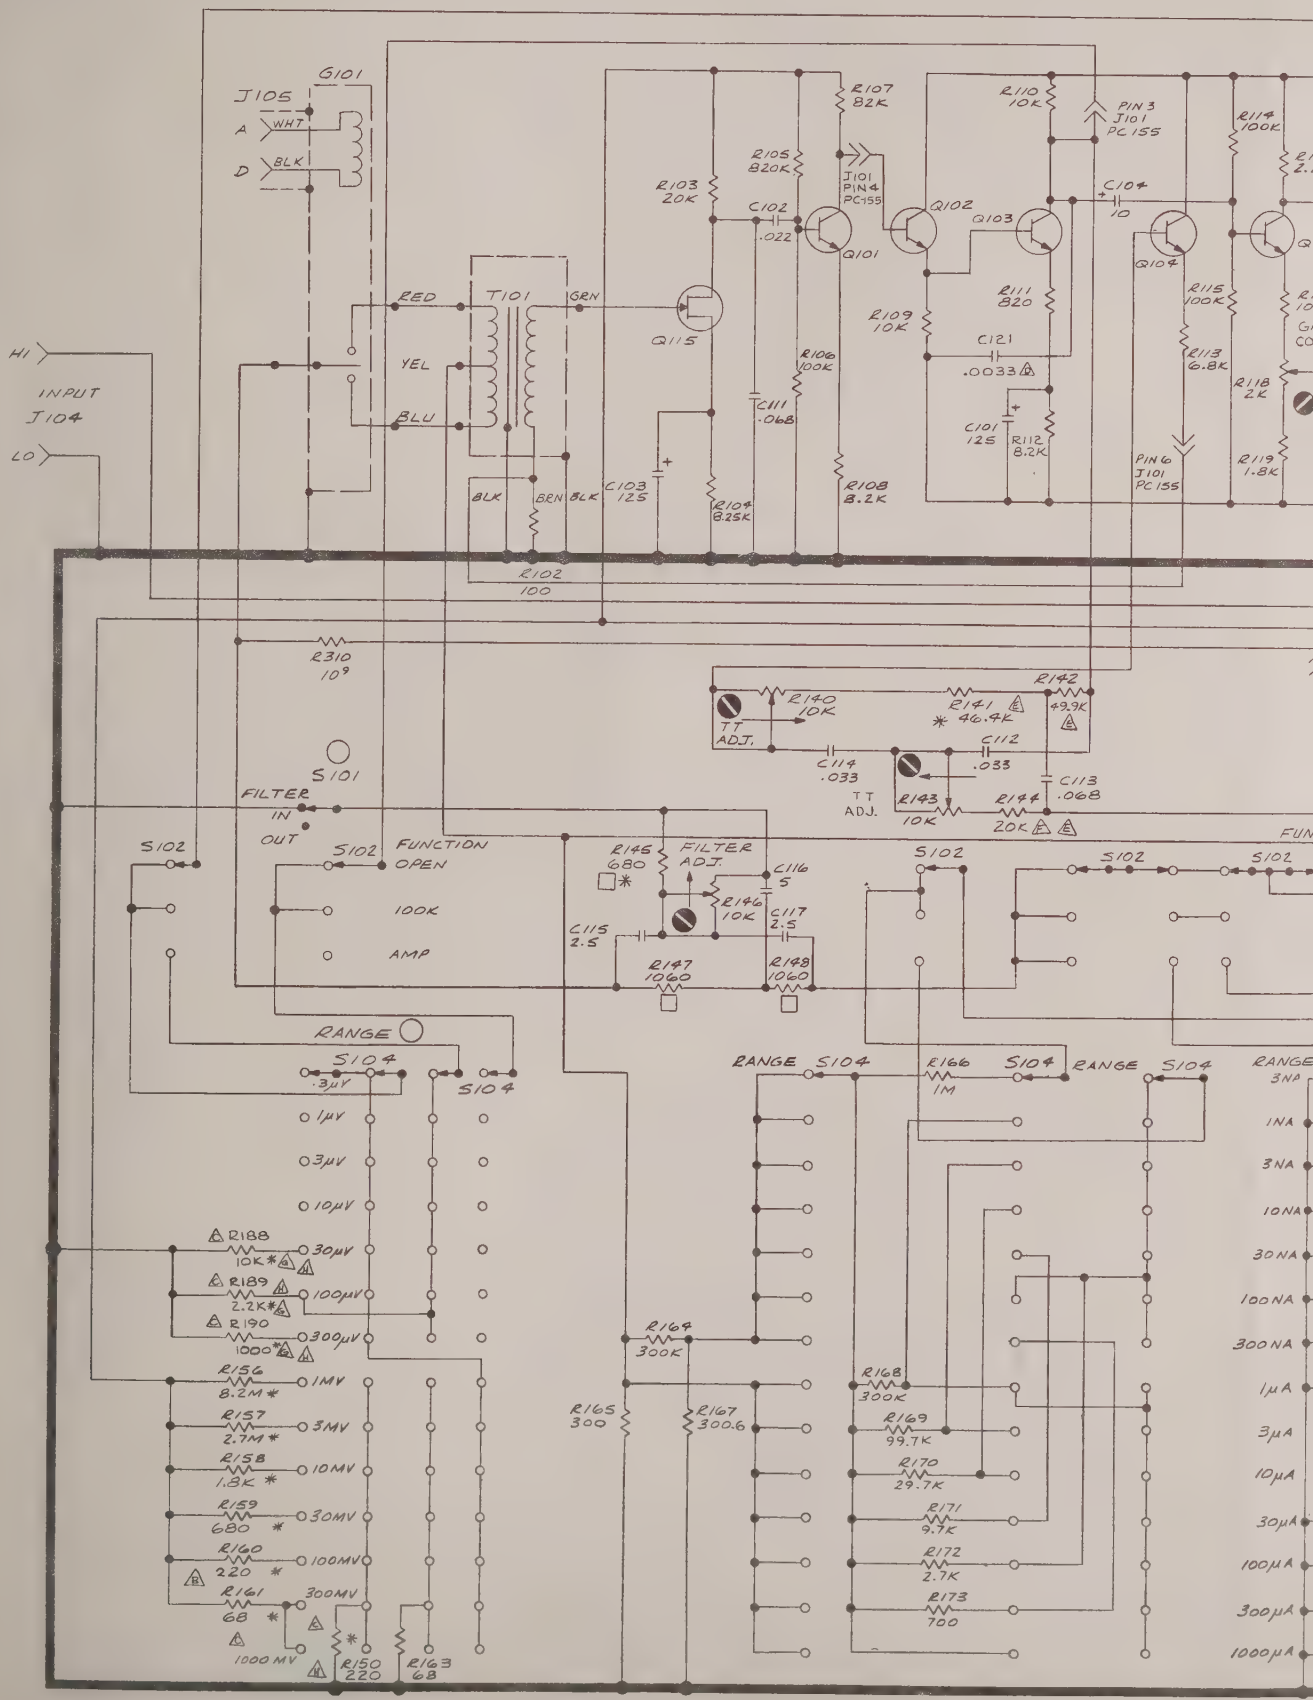
G101
J105
A
WHT
D
BLK
T101
RED
YEL
BLU
GRN
BLK
BRN
BLK
HI
INPUT
J104
LO
R102
100
R103
20K
R104
8.25K
R105
820K
R106
100K
R107
82K
R108
8.2K
C102
.022
C103
125
C111
.068
Q101
Q115
J101
PIN 4
PC155
R109
10K
R110
10K
R111
820
C121
.0033
C101
125
R112
8.2K
Q102
Q103
PIN 3
J101
PC155
C104
10
Q104
R113
6.8K
R114
100K
R115
100K
R118
2K
R119
1.8K
PIN 6
J101
PC155
R310
10⁹
S101
FILTER
IN
OUT
S102
FUNCTION
OPEN
100K
AMP
R140
10K
TT
ADJ.
R141
46.4K
R142
49.9K
C112
.033
C113
.068
C114
.033
R143
10K
R144
20K
TT
ADJ.
R145
680
FILTER
ADJ.
R146
10K
C116
5
C117
2.5
C115
2.5
R147
1060
R148
1060
RANGE
S104
.3μV
1μV
3μV
10μV
R188
10K
30μV
R189
2.2K
100μV
R190
1000
300μV
R156
8.2M
1MV
R157
2.7M
3MV
R158
1.8K
10MV
R159
680
30MV
R160
220
100MV
R161
68
300MV
1000 MV
R150
220
R163
68
R164
300K
R165
300
R167
300.6
R166
1M
R168
300K
R169
99.7K
R170
29.7K
R171
9.7K
R172
2.7K
R173
700
3NA
1NA
3NA
10NA
30NA
100NA
300NA
1μA
3μA
10μA
30μA
100μA
300μA
1000μA

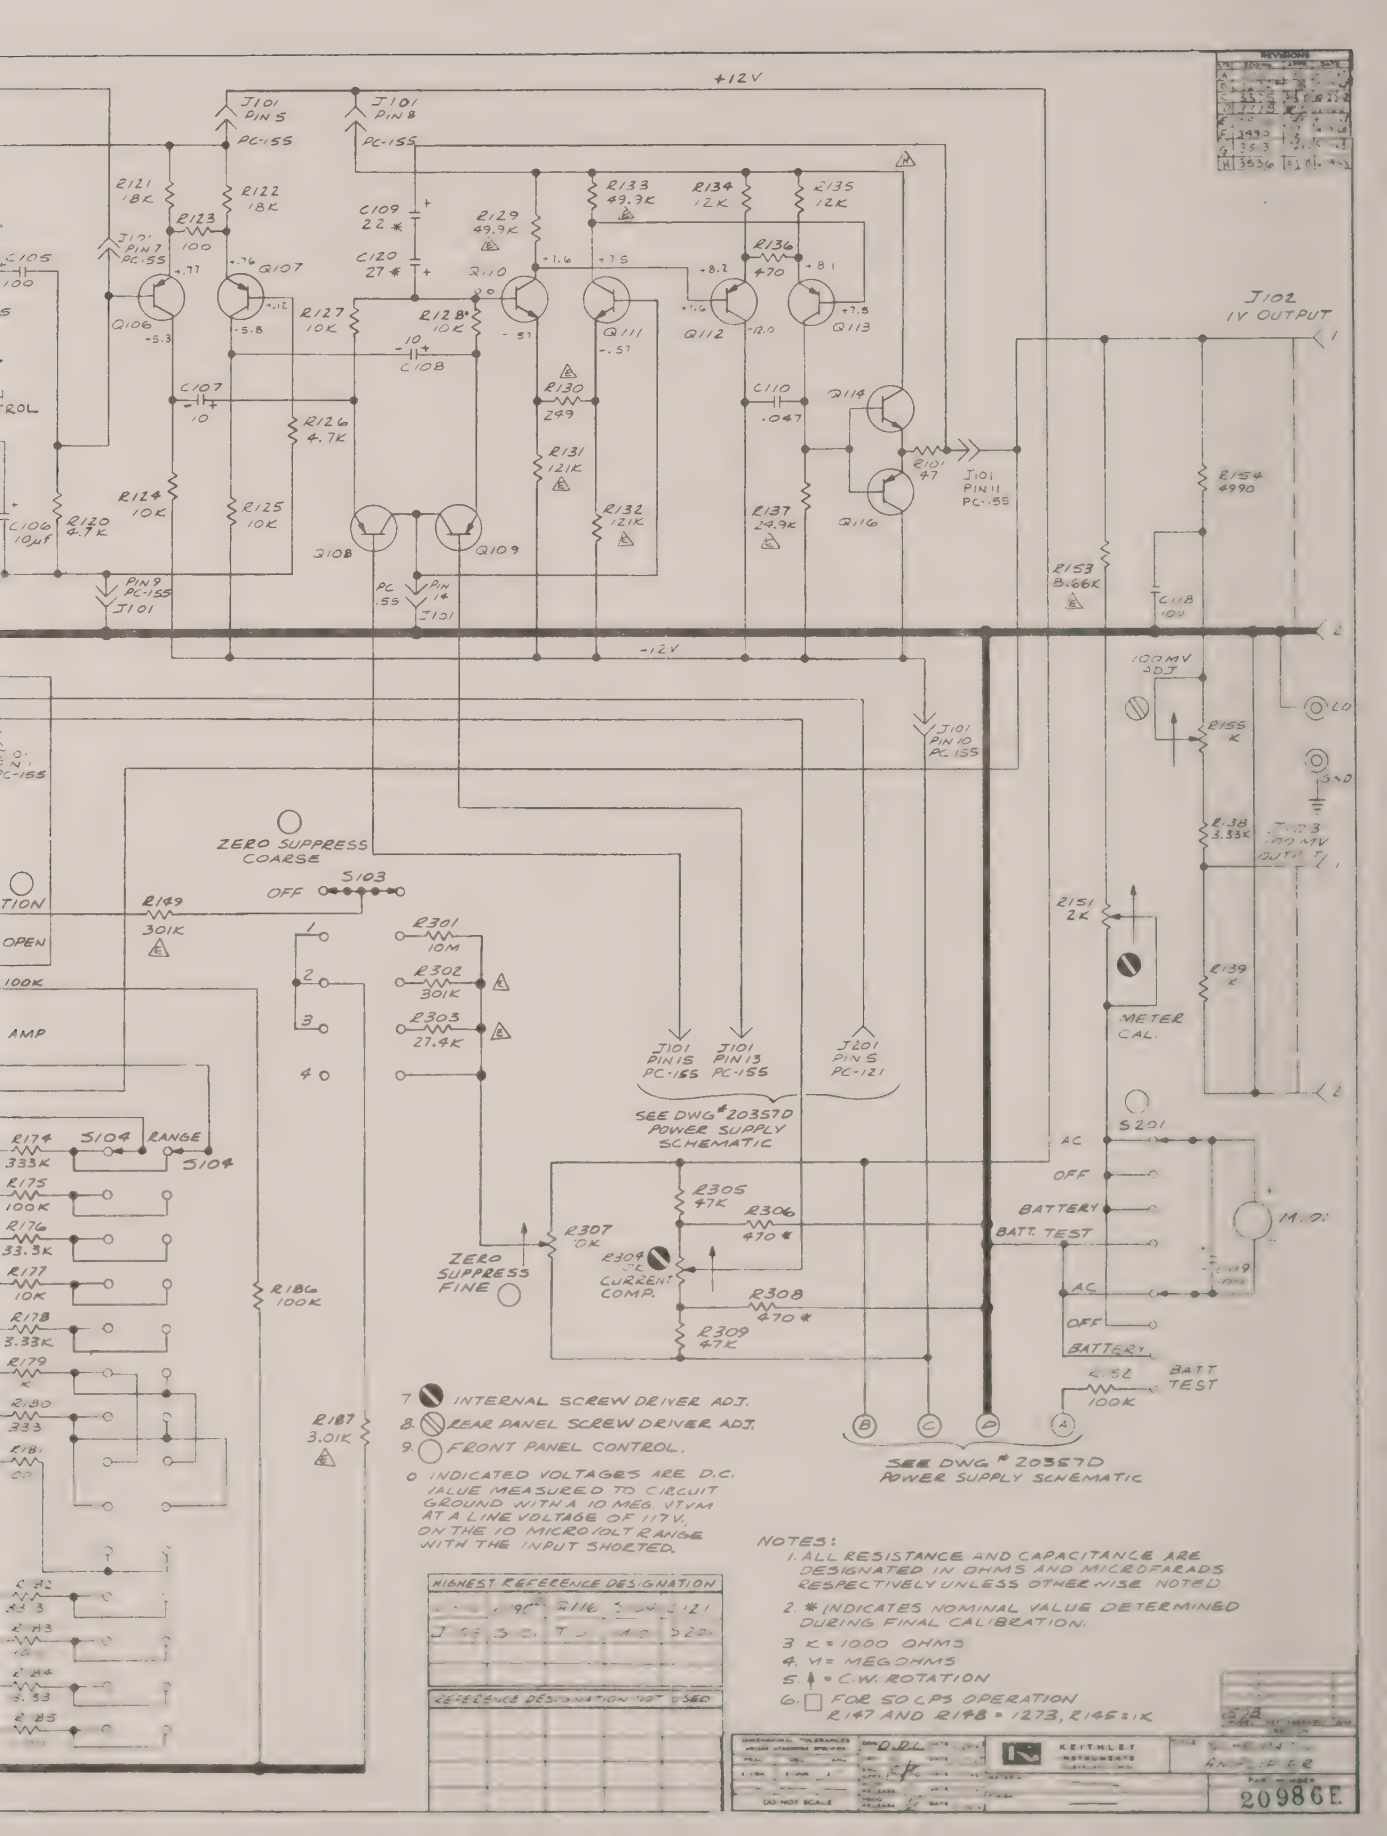
+12V
-12V
J101 PIN 5
J101 PIN 8
PC-155
R121 18K
R122 18K
R123 100
C109 22 *
C120 27 *
R129 49.9K
R133 49.3K
R134 12K
R135 12K
R136 470
Q106
Q107
Q110
Q111
Q112
Q113
R127 10K
R128 10K
C108 10
C107 10
R130 249
R131 121K
R132 121K
C110 .047
Q114
Q116
R101 47
J101 PIN 11 PC-155
R137 24.9K
R126 4.7K
R124 10K
R125 10K
R120 4.7K
C106 10µf
Q108
Q109
J101 PIN 9 PC-155
J101 PIN 16 PC-155
J102 1V OUTPUT
R154 4990
R153 8.66K
C118 .02
100 MV ADJ
R155 K
R138 3.33K
R151 2K
R139 K
METER CAL.
LO
GND
J103 100 MV OUTPUT
J101 PIN 10 PC-155
ZERO SUPPRESS COARSE
S103
OFF
R149 301K
R301 10M
R302 301K
R303 27.4K
J101 PIN 15 PC-155
J101 PIN 13 PC-155
J201 PIN 5 PC-121
SEE DWG # 203570 POWER SUPPLY SCHEMATIC
S201
AC
OFF
BATTERY
BATT. TEST
M.D.
R305 47K
R306 470 *
R307 10K
R309* CURRENT COMP.
R308 470 *
R309 47K
ZERO SUPPRESS FINE
R174 333K
S104 RANGE
S104
R175 100K
R176 33.3K
R177 10K
R178 3.33K
R179 K
R180 333
R181 100
R186 100K
R187 3.01K
R152 100K
BATT TEST
B
C
E
A
SEE DWG # 203570 POWER SUPPLY SCHEMATIC
7 INTERNAL SCREW DRIVER ADJ.
8. REAR PANEL SCREW DRIVER ADJ.
9. FRONT PANEL CONTROL.
0 INDICATED VOLTAGES ARE D.C. VALUE MEASURED TO CIRCUIT GROUND WITH A 10 MEG. VTVM AT A LINE VOLTAGE OF 117V, ON THE 10 MICROVOLT RANGE WITH THE INPUT SHORTED.
NOTES:
1. ALL RESISTANCE AND CAPACITANCE ARE DESIGNATED IN OHMS AND MICROFARADS RESPECTIVELY UNLESS OTHERWISE NOTED
2. * INDICATES NOMINAL VALUE DETERMINED DURING FINAL CALIBRATION.
3. K = 1000 OHMS
4. M = MEGOHMS
5. ↑ = C.W. ROTATION
6. □ FOR 50 CPS OPERATION R147 AND R148 = 1273, R145 = 1K
HIGHEST REFERENCE DESIGNATION
REFERENCE DESIGNATION NOT USED
DO NOT SCALE
KEITHLEY INSTRUMENTS
20986E

REPAIR AND CALIBRATION FORM

For repair or calibration, please fill out this form and return it with your instrument to:

Sales Service Department
Keithley Instruments, Inc.
28775 Aurora Road
Cleveland, Ohio 44139

R-_____
Do not write in this space.

User's Name _____ Telephone _____ Ext. _____
Company _____ Address _____
Division _____ City _____ State _____ Zip _____
Date _____ Model No. _____ Serial No. _____

1. Reason for Return
   - ☐ Repair and Recalibration
   - ☐ Recalibration only (No report, except as specified in item 4 on reverse)*

   *If repairs are necessary to meet specifications, they will be in addition to the calibration.

2. Calibration Report Desired
   - ☐ Report of Calibration Certified Traceable to N.B.S.
   - ☐ Calibration Report
   - ☐ Certificate of Compliance
   - ☐ None

   (for details, see reverse side of this form)

3. To help repair the instrument, briefly describe the problem: _____

4. Is the problem ☐ Constant ☐ Intermittant
   Under what conditions does the problem occur:
   a) Control setting _____
   b) Approx. Temperature _____ °F
   c) Approx. Temperature variation ± _____ °F
   d) Approx. Humidity (high, medium, low) _____
   e) Line voltage _____
   f) Other (such as line transients, line variations, etc.) _____

5. Please draw a block diagram of the system using the Keithley. List any other pertinent data which can help in the repair. Include charts or other data if available.
   Signal Source _____
   Source Impedance _____
   Readout Device:
   - ☐ Recorder
   - ☐ Oscilloscope
   - ☐ Other
   - ☐ None

   Lengths & Types of Connecting Cables _____

6. What repairs or modifications have been made on this instrument which are not on file with the Keithley Repair Department? _____

7. Please enclose any other pertinent data and charts which you feel might help the Repair and Calibration Department

_____ Signature _____ Title

1267

- cut along dotted line -

CALIBRATIONS AVAILABLE AT KEITHLEY INSTRUMENTS.

Listed and defined below are the four types of calibrations and their associated report formats which are presently available at Keithley Instruments. They fall into the following categories:

1. Report of Calibration Certified Traceable to the National Bureau of Standards
2. Calibration Report
3. Certificate of Compliance
4. Recalibration

All calibration and certification performed by Keithley Instruments is in accord with MIL-C-45662A.

Prices shown below are in addition to repair charges for any work necessary to place a customer's unit into first class condition prior to the calibration.

1. Report of Calibration Certified Traceable to the National Bureau of Standards.

This is a completely documented report, including all basic errors or deviations from nominal settings on appropriate ranges, terminals, dials, etc. Work is performed using the primary standards of the company with secondary transfers kept to a minimum. The NBS test numbers for the latest recalibration of the primary standards are furnished.

By definition, the above is performed in our Standards Laboratory so that random operator induced error is minimized and maximum protection to the equipment used is maintained.

This type of calibration is not recommended for instruments with a basic inaccuracy of 1% or greater. The precision involved in this report makes it uneconomical for such instruments. The Calibration Report listed below (No. 2) would be better suited in this case.

As of 11/1/69 the Report of Calibration Certified Traceable to the National Bureau of Standards is available on the following instruments at the prices listed:

Model 140	$275	Model 5155 (Complete Set)	$295
Model 260	$225	Model 5155-10^{8}	$ 50
Model 261	$375	Model 5155-10^{9}	$ 50
Model 515	$375	Model 5155-10^{10}	$ 50
Model 630	$275	Model 5155-10^{11}	$ 60
Model 660A	$250	Model 5155-10^{12}	$ 60
Model 662	$275	Model 5155-10^{13}	$ 80

2. Calibration Report.

This report shows only the cardinal range, terminal, dial, etc. errors as determined by production calibration equipment and personnel. The production equipment is maintained traceable by transfer techniques against the primary standards maintained by the company. We attest to this fact and list basic deviations from nominal but the conditions of calibration are not as precisely controlled as the previous report nor are NBS test numbers supplied.

This report is available for any instrument in our line. As of November 1, 1969, only the following price has been established for this report:

Model 261 . . . . . $ 55

Prices for other units can be estimated upon request.

3. Certificate of Compliance.

This is merely a restatement of the basic guarantee that the instrument was calibrated on equipment that is maintained by our standards personnel against primary standards. No report is issued.

This Certificate of Compliance is available at no charge for any instrument with the exception of the Model 261.

A newly purchased Model 261 or one returned for repair or recalibration is automatically supplied with a Calibration Report (as described in (2) above). The nature of this instrument makes it necessary to complete this report to ascertain specified accuracy. This Calibration Report is forwarded to the customer with the instrument. The $55 charge is incorporated as part of the normal calibration charge of the Model 261.

4. Recalibration.

This is a recalibration of the instrument according to our factory calibration procedures. The prices for this as of November 1, 1969 are as follows:

Model 260 . . . . . $ 85 (No report supplied. A Certificate of Compliance can be had at no charge if requested).

Model 261 . . . . . $ 55 (Calibration Report as described in (2) above is supplied. See (3) for explanation).

All other instruments are on a time and material basis for the particular unit involved.

TS. INC.
400